

Supported Printers List

xPrintServer™

Network Edition



“The Plug-and-Print Solution for your iOS® Devices”

The following list is a continuously updated listing of supported printers and print families for the Lantronix **xPrintServer**.

©2011 Lantronix, Inc. All Rights Reserved. Lantronix and xPrintServer are registered trademarks of Lantronix, Inc. iPad, iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple, Inc., registered in the U.S. and other countries. All other trademarks and trade names are the property of their respective holders.

Supported Printers & Print Families

| | |
|---------|------------------------------|
| Alps | Alps MD-5000 |
| Alps | Alps MD-1300 |
| Alps | Alps MD-1000 |
| Alps | Alps MD-1500 |
| Alps | Alps MD-2000 |
| Alps | Alps MD-4000 |
| Anitech | Anitech M24 |
| Apollo | Apollo P-2500 |
| Apollo | Apollo P-1200 |
| Apollo | Apollo P-2550 |
| Apollo | Apollo P-1220 Barbie |
| Apollo | Apollo P-1250 |
| Apollo | Apollo P-2200 |
| Apollo | Apollo P-2250 |
| Apollo | Apollo 2100 |
| Apollo | Apollo 2600 |
| Apollo | Apollo 2150 |
| Apollo | Apollo 2650 |
| Apollo | Apollo p2000-u |
| Apollo | Apollo P-2100 |
| Apollo | Apollo P-2600 |
| Apollo | Apollo P-2150 |
| Apollo | Apollo P-2650 |
| Apollo | Apollo 2500 |
| Apollo | Apollo p2250 |
| Apollo | Apollo 2200 |
| Apple | Apple 12/640ps |
| Apple | Apple LaserWriter 16/600 |
| Apple | Apple LaserWriter Select 360 |
| Apple | Apple Color StyleWriter 4500 |
| Apple | Apple LaserWriter Pro 630 |
| Apple | Apple Dot Matrix |
| Apple | Apple ImageWriter II |
| Apple | Apple ImageWriter LQ |
| Apple | Apple LaserWriter IINTX |
| Apple | Apple ImageWriter |



| | |
|---------|--------------------------------|
| Apple | Apple Color StyleWriter 6500 |
| Apple | Apple LaserWriter 4/600 |
| Apple | Apple LaserWriter IIg |
| Apple | Apple LaserWriter NT |
| Apple | Apple Color StyleWriter 4100 |
| Brother | Brother HL-1850/70N |
| Brother | Brother HL-8050N BR-Script3 |
| Brother | Brother HL-1650/70N |
| Brother | Brother MFC-8220 BR-Script3 |
| Brother | Brother DCP-9045CDN |
| Brother | Brother HL-7050N |
| Brother | Brother HL-720 |
| Brother | Brother HL-730 |
| Brother | Brother HL-2270DW |
| Brother | Brother MFC-9440CN |
| Brother | Brother MFC-8890DW |
| Brother | Brother HL-760 |
| Brother | Brother HL-1430 |
| Brother | Brother HL-1440 |
| Brother | Brother HL-1450 |
| Brother | Brother MFC-7820N BR-Script3 |
| Brother | Brother MFC-8480DN |
| Brother | Brother MFC-9450CDN |
| Brother | Brother HL-3260N |
| Brother | Brother DCP-7025 BR-Script3 |
| Brother | Brother DCP-8045D |
| Brother | Brother MFC-9450CDN BR-Script3 |
| Brother | Brother HL-1470N |
| Brother | Brother MFC-8380DN |
| Brother | Brother DCP-7045N |
| Brother | Brother MFC-9320CW BR-Script3 |
| Brother | Brother HL-8 |
| Brother | Brother DCP-9010CN |
| Brother | Brother MFC-9100c |
| Brother | Brother HL-3450CN |
| Brother | Brother HL-4000CN |
| Brother | Brother HL-6050D/DN |
| Brother | Brother MFC-P2500 |
| Brother | Brother HL-2460 |
| Brother | Brother DCP-9045CDN BR-Script3 |
| Brother | Brother HL-5030 |
| Brother | Brother HL-5150D |
| Brother | Brother HL-5040 |

| | |
|---------|--------------------------------|
| Brother | Brother HL-5050 |
| Brother | Brother HL-960 |
| Brother | Brother MFC-8380DN BR-Script3 |
| Brother | Brother HJ-400 |
| Brother | Brother HL-1650 |
| Brother | Brother HL-3070CW BR-Script3 |
| Brother | Brother MFC-7840W BR-Script3 |
| Brother | Brother DCP-8080DN BR-Script3 |
| Brother | Brother MFC-8480DN BR-Script3 |
| Brother | Brother HL-5070N |
| Brother | Brother MFC9840CDW |
| Brother | Brother HL-5050 BR-Script3 |
| Brother | Brother MFC-9500 |
| Brother | Brother DCP-8045D BR-Script3 |
| Brother | Brother MFC-9050 |
| Brother | Brother MFC-9120CN BR-Script3 |
| Brother | Brother HL-10V |
| Brother | Brother HL-10h |
| Brother | Brother MFC-8680DN BR-Script3 |
| Brother | Brother HL-5070N BR-Script3 |
| Brother | Brother MFC-8220 |
| Brother | Brother DCP-8020 BR-Script3 |
| Brother | Brother HL-2140 |
| Brother | Brother MFC-8880DN BR-Script3 |
| Brother | Brother HL-6050 |
| Brother | Brother HL-5350DN |
| Brother | Brother HL-630 |
| Brother | Brother HL-3400CN |
| Brother | Brother MFC-9420CN BR-Script3 |
| Brother | Brother HL-1850/70N BR-Script3 |
| Brother | Brother MFC-8640D |
| Brother | Brother HL-1670N |
| Brother | Brother HL-660 |
| Brother | Brother MFC-8420 BR-Script3 |
| Brother | Brother DCP-8040 BR-Script3 |
| Brother | Brother HL-2070N |
| Brother | Brother MFC-7450 |
| Brother | Brother HL-5250DN |
| Brother | Brother HL-3450CN BR-Script3 |
| Brother | Brother HL-2460N |
| Brother | Brother HL-5240 |
| Brother | Brother MFC-8820D BR-Script3 |
| Brother | Brother MFC-6550MC |

| | |
|---------|--------------------------------|
| Brother | Brother HL-1850 |
| Brother | Brother HL-7050 BR-Script3 |
| Brother | Brother HL-4Ve |
| Brother | Brother HL-2460 BR-Script3 |
| Brother | Brother MFC-7840N BR-Script3 |
| Brother | Brother MFC-8440 BR-Script3 |
| Brother | Brother MFC-8820D |
| Brother | Brother HL-4070CDW BR-Script3 |
| Brother | Brother HL-7050 |
| Brother | Brother MFC-7820N |
| Brother | Brother MFC-9840CDW BR-Script3 |
| Brother | Brother HL-5380DN BR-Script3 |
| Brother | Brother MFC-8420 |
| Brother | Brother HL-1470N BR-Script2 |
| Brother | Brother MFC-9440CN BR-Script3 |
| Brother | Brother DCP-9040CN BR-Script3 |
| Brother | Brother MFC-8440 |
| Brother | Brother HL-1020 |
| Brother | Brother HL-2170W |
| Brother | Brother HL-1030 |
| Brother | Brother HL-820 |
| Brother | Brother HL-1040 |
| Brother | Brother HL-1050 |
| Brother | Brother DCP-9040CN |
| Brother | Brother MC-3000 |
| Brother | Brother HL-1060 |
| Brother | Brother HL-1070 |
| Brother | Brother HL-2700CN |
| Brother | Brother DCP-7010 |
| Brother | Brother DCP-8080DN |
| Brother | Brother MFC-8370DN BR-Script3 |
| Brother | Brother DCP-7020 |
| Brother | Brother DCP-7025 |
| Brother | Brother HL-2400CeN |
| Brother | Brother MFC-7225N |
| Brother | Brother HL-3070CW |
| Brother | Brother HL-4070CDW |
| Brother | Brother HL-5370DW |
| Brother | Brother MFC-9420CN |
| Brother | Brother DCP-8085DN |
| Brother | Brother HL-4050CDN BR-Script3 |
| Brother | Brother HL-2600CN |
| Brother | Brother MFC-9010CN BR-Script3 |

| | |
|---------|--------------------------------|
| Brother | Brother MFC 7150C |
| Brother | Brother HL-5240 BR-Script3 |
| Brother | Brother MFC-8840D |
| Brother | Brother MFC-7225N BR-Script3 |
| Brother | Brother HL-1870N |
| Brother | Brother HL-3260N BR-Script3 |
| Brother | Brother MFC-8640D BR-Script3 |
| Brother | Brother MFC-8890DW BR-Script3 |
| Brother | Brother HL-5370DW BR-Script3 |
| Brother | Brother MFC-8670DN BR-Script3 |
| Brother | Brother HL-5270DN |
| Brother | Brother MFC-9010CN |
| Brother | Brother HL-2030 |
| Brother | Brother HL-2035 |
| Brother | Brother HL-6050D/DN BR-Script3 |
| Brother | Brother MFC-9320CW |
| Brother | Brother MFC-8600 |
| Brother | Brother MFC-7840N |
| Brother | Brother HL-5250DN BR-Script3 |
| Brother | Brother MFC-7840W |
| Brother | Brother HL-2060 |
| Brother | Brother HL-4050CDN |
| Brother | Brother HL-4040CN |
| Brother | Brother HL-1270N |
| Brother | Brother HL-5170DN |
| Brother | Brother MFC-8670DN |
| Brother | Brother HL-5350DN BR-Script3 |
| Brother | Brother HL-1660e |
| Brother | Brother HL-1230 |
| Brother | Brother HL-5070DN BR-Script3J |
| Brother | Brother DCP-9010CN BR-Script3 |
| Brother | Brother HL-1650/70N BR-Script3 |
| Brother | Brother HL-1240 |
| Brother | Brother DCP-8020 |
| Brother | Brother HL-1250 |
| Brother | Brother HL-1260 |
| Brother | Brother HL-5140 |
| Brother | Brother DCP-8040 |
| Brother | Brother HL-5150D BR-Script3 |
| Brother | Brother HL-5380DN |
| Brother | Brother MFC-9120CN |
| Brother | Brother MFC-8880DN |
| Brother | Brother DCP-8025D BR-Script3 |



| | |
|---------|-------------------------------|
| Brother | Brother HL-1450 BR-Script2 |
| Brother | Brother DCP-8025D |
| Brother | Brother HL-2600CN BR-Script3 |
| Brother | Brother HL-6050 BR-Script3 |
| Brother | Brother MFC-8840D BR-Script3 |
| Brother | Brother DCP-8085DN BR-Script3 |
| Brother | Brother HL-2700CN BR-Script3 |
| Brother | Brother DCP-7045N BR-Script3 |
| Brother | Brother HL-8050N |
| Brother | Brother HL-5170DN BR-Script3 |
| Brother | Brother MFC-9600 |
| Brother | Brother DCP-1200 |
| Brother | Brother MFC-8300 |
| Brother | Brother HL-5270DN BR-Script3 |
| Brother | Brother MFC-7450 BR-Script3 |
| Brother | Brother MFC-8370DN |
| Brother | Brother MFC-8680DN |
| Canon | Canon BJC-7100 |
| Canon | Canon BJC-4550 |
| Canon | Canon BJC-240 |
| Canon | Canon CP-330 |
| Canon | Canon BJC-250 |
| Canon | Canon PIXMA iP4200 |
| Canon | Canon MultiPASS C5500 |
| Canon | Canon imageRunner 1023iF |
| Canon | Canon PIXMA MP600 |
| Canon | Canon PIXMA MP150 |
| Canon | Canon imageRunner 8500 |
| Canon | Canon SELPHY ES1 |
| Canon | Canon SELPHY ES2 |
| Canon | Canon PIXMA MP610 |
| Canon | Canon imageRunner C5800 |
| Canon | Canon PIXMA iP4700 |
| Canon | Canon PIXMA MP160 |
| Canon | Canon S500 |
| Canon | Canon imageRunner 3300 |
| Canon | Canon PIXMA MP620 |
| Canon | Canon PIXMA MP170 |
| Canon | Canon imageRunner 330s |
| Canon | Canon imageRunner C6870U |
| Canon | Canon PIXMA MP630 |
| Canon | Canon imageRunner 8070 |
| Canon | Canon PIXMA MX410 |

| | |
|-------|--------------------------|
| Canon | Canon LBP-3460 |
| Canon | Canon PIXMA MP180 |
| Canon | Canon CP-10 |
| Canon | Canon PIXMA MP640 |
| Canon | Canon PIXMA MX420 |
| Canon | Canon SELPHY-CP-500 |
| Canon | Canon imageRunner 2016 |
| Canon | Canon imageRunner 2018 |
| Canon | Canon BJC-250ex |
| Canon | Canon SELPHY-CP-510 |
| Canon | Canon BJ-200 |
| Canon | Canon imageRunner 2020 |
| Canon | Canon imageRunner 2022 |
| Canon | Canon SELPHY-CP-520 |
| Canon | Canon imageRunner C3200 |
| Canon | Canon SELPHY-CP-530 |
| Canon | Canon BJC-265SP |
| Canon | Canon BJC-5500 |
| Canon | Canon imageRunner C5870U |
| Canon | Canon LIPS-II+ |
| Canon | Canon LIPS-III |
| Canon | Canon imageRunner C3170i |
| Canon | Canon BJC-4200 |
| Canon | Canon PIXMA iP2600 |
| Canon | Canon BJC-4310SP |
| Canon | Canon BJ-5 |
| Canon | Canon PIXMA iP5200 |
| Canon | Canon PIXMA MG8100 |
| Canon | Canon PIXMA Pro9000 |
| Canon | Canon BJ-20 |
| Canon | Canon PIXMA MX7600 |
| Canon | Canon imageRunner C6800 |
| Canon | Canon BJ-30 |
| Canon | Canon BJC-2100 |
| Canon | Canon PIXMA Pro9500 |
| Canon | Canon BJC-2110 |
| Canon | Canon LBP-310 |
| Canon | Canon BJC-6000 |
| Canon | Canon S200 |
| Canon | Canon imageRunner C5058 |
| Canon | Canon imageRunner C5068 |
| Canon | Canon PIXUS iP2700 |
| Canon | Canon LIPS-IVv |

| | |
|-------|------------------------|
| Canon | Canon imageRunner 3025 |
| Canon | Canon PIXMA MP800 |
| Canon | Canon PIXMA iP3100 |
| Canon | Canon LBP-350 |
| Canon | Canon PIXMA MP810 |
| Canon | Canon PIXMA MP360 |
| Canon | Canon BJC-6500 |
| Canon | Canon PIXMA MP370 |
| Canon | Canon PIXMA MP830 |
| Canon | Canon LBP-1000 |
| Canon | Canon imageRunner 2200 |
| Canon | Canon PIXMA MP390 |
| Canon | Canon BJC-210SP |
| Canon | Canon SELPHY-CP-710 |
| Canon | Canon SELPHY-CP-720 |
| Canon | Canon imageRunner 2230 |
| Canon | Canon GP 335 |
| Canon | Canon PIXMA MG5200 |
| Canon | Canon SELPHY-CP-730 |
| Canon | Canon SELPHY-CP-740 |
| Canon | Canon i850 |
| Canon | Canon imageRunner 3570 |
| Canon | Canon PIXMA iP1000 |
| Canon | Canon SELPHY-CP-750 |
| Canon | Canon i860 |
| Canon | Canon i865 |
| Canon | Canon BJC-4400 |
| Canon | Canon imageRunner 2270 |
| Canon | Canon PIXMA iP6700 |
| Canon | Canon CP-200 |
| Canon | Canon iP4000 |
| Canon | Canon PIXMA iP1500 |
| Canon | Canon BJC-7000 |
| Canon | Canon BJC-7004 |
| Canon | Canon CP-220 |
| Canon | Canon SELPHY ES20 |
| Canon | Canon PIXMA iX4000 |
| Canon | Canon BJC-600 |
| Canon | Canon BJC-880J |
| Canon | Canon LBP-8A1 |
| Canon | Canon BJC-610 |
| Canon | Canon PIXMA iP4100 |
| Canon | Canon LBP-4sx |

| | |
|-------|-------------------------|
| Canon | Canon BJC-620 |
| Canon | Canon LBP-5960 |
| Canon | Canon LBP-5970 |
| Canon | Canon LBP-5975 |
| Canon | Canon PIXMA MP500 |
| Canon | Canon PIXMA MP510 |
| Canon | Canon PIXMA iP4600 |
| Canon | Canon BJC-6200 |
| Canon | Canon S400 |
| Canon | Canon PIXMA MP520 |
| Canon | Canon PIXMA MX300 |
| Canon | Canon BJC-1000 |
| Canon | Canon PIXMA Pro9500mk2 |
| Canon | Canon imageRunner 7105 |
| Canon | Canon LBP-3360 |
| Canon | Canon PIXMA iP8500 |
| Canon | Canon imageRunner 3225 |
| Canon | Canon PIXMA MP540 |
| Canon | Canon SELPHY-CP-400 |
| Canon | Canon PIXMA MP550 |
| Canon | Canon PIXMA MX330 |
| Canon | Canon imageRunner 4570 |
| Canon | Canon BJ-100 |
| Canon | Canon PIXMA MX340 |
| Canon | Canon S450 |
| Canon | Canon imageRunner C3100 |
| Canon | Canon BJ-10e |
| Canon | Canon PIXMA iP2000 |
| Canon | Canon BJ-10v |
| Canon | Canon imageRunner 2020i |
| Canon | Canon PIXMA MX360 |
| Canon | Canon BJC-50 |
| Canon | Canon BJC-55 |
| Canon | Canon i560 |
| Canon | Canon BJC-70 |
| Canon | Canon BJC-4100 |
| Canon | Canon PIXMA iP2500 |
| Canon | Canon PIXMA MX850 |
| Canon | Canon BJC-80 |
| Canon | Canon BJC-85 |
| Canon | Canon BJ-15v |
| Canon | Canon imageRunner 5000 |
| Canon | Canon PIXMA MX860 |

| | |
|-------|--------------------------|
| Canon | Canon MultiPASS C2500 |
| Canon | Canon LBP-1260 |
| Canon | Canon PIXMA Pro9000mk2 |
| Canon | Canon PIXMA MX870 |
| Canon | Canon imageRunner C3170 |
| Canon | Canon PIXMA iP1200 |
| Canon | Canon PIXMA iX5000 |
| Canon | Canon PIXMA MX880 |
| Canon | Canon imageRunner 1023N |
| Canon | Canon BJC-8500 |
| Canon | Canon LBP-1760 |
| Canon | Canon BJC-2000 |
| Canon | Canon BJC-800 |
| Canon | Canon BJC-2010 |
| Canon | Canon PIXMA iP4300 |
| Canon | Canon S100 |
| Canon | Canon PIXMA MP220 |
| Canon | Canon imageRunner 5570 |
| Canon | Canon PIXMA MP700 |
| Canon | Canon PIXMA iP3000 |
| Canon | Canon PIXMA MP250 |
| Canon | Canon PIXMA MP710 |
| Canon | Canon PIXMA iP4800 |
| Canon | Canon PIXMA iP6600D |
| Canon | Canon S600 |
| Canon | Canon MultiPASS C3000 |
| Canon | Canon PIXMA MP270 |
| Canon | Canon PIXMA MP730 |
| Canon | Canon PIXMA MP280 |
| Canon | Canon imageRunner C5185i |
| Canon | Canon PIXMA MP740 |
| Canon | Canon BJC-5100 |
| Canon | Canon SELPHY-CP-600 |
| Canon | Canon S630 |
| Canon | Canon PIXMA MP750 |
| Canon | Canon imageRunner 6000 |
| Canon | Canon PIXMA MP760 |
| Canon | Canon MultiPASS C3500 |
| Canon | Canon BJ-300 |
| Canon | Canon PIXMA MP770 |
| Canon | Canon PIXMA iP2200 |
| Canon | Canon PIXMA MG5100 |
| Canon | Canon PIXMA MP780 |

| | |
|-------|--------------------------|
| Canon | Canon PIXMA MP790 |
| Canon | Canon BJ-330 |
| Canon | Canon PIXMA iP6000D |
| Canon | Canon LBP-4+ |
| Canon | Canon BJC-4300 |
| Canon | Canon LBP-4U |
| Canon | Canon PIXUS iP3100 |
| Canon | Canon PIXMA iX6500 |
| Canon | Canon BJC-8200 |
| Canon | Canon BJ-35v |
| Canon | Canon LIPS-IV |
| Canon | Canon BJC-3000 |
| Canon | Canon CP-100 |
| Canon | Canon LBP-5360 |
| Canon | Canon PIXMA iP5300 |
| Canon | Canon S4500 |
| Canon | Canon i80 |
| Canon | Canon imageRunner 6570 |
| Canon | Canon PIXMA iP4000 |
| Canon | Canon imageRunner C2570i |
| Canon | Canon PIXMA iP1900 |
| Canon | Canon imageRunner C2550 |
| Canon | Canon imageRunner C2570 |
| Canon | Canon PIXMA iP4500 |
| Canon | Canon BJC-6100 |
| Canon | Canon S300 |
| Canon | Canon LBP-430 |
| Canon | Canon imageRunner C5180 |
| Canon | Canon LBP-320 Pro |
| Canon | Canon PIXMA iX7000 |
| Canon | Canon imageRunner C5185 |
| Canon | Canon PIXMA MP450 |
| Canon | Canon PIXMA MG6100 |
| Canon | Canon PIXMA MP460 |
| Canon | Canon S800 |
| Canon | Canon PIXMA MX700 |
| Canon | Canon LBP-470 |
| Canon | Canon PIXMA iP6100D |
| Canon | Canon PIXMA MP480 |
| Canon | Canon i450 |
| Canon | Canon GP 405 |
| Canon | Canon PIXUS iP4100 |
| Canon | Canon SELPHY-CP-800 |



| | |
|---------|--------------------------|
| Canon | Canon PIXMA MP493 |
| Canon | Canon PIXMA MP495 |
| Canon | Canon PIXMA MP950 |
| Canon | Canon imageRunner C2620N |
| Canon | Canon PIXMA MP960 |
| Canon | Canon BJC-4000 |
| Canon | Canon imageRunner 7086 |
| Canon | Canon PIXMA MP970 |
| Canon | Canon imageRunner 7095 |
| Canon | Canon PIXMA MP980 |
| Canon | Canon imageRunner 2800 |
| Canon | Canon imageRunner 1023 |
| Canon | Canon imageRunner 2016i |
| Canon | Canon PIXMA MP990 |
| Canon | Canon PIXMA iP5000 |
| Canon | Canon BJC-255SP |
| Canon | Canon BJC-210 |
| Canon | Canon MultiPASS C5000 |
| Canon | Canon CP-300 |
| Canon | Canon PIXMA iP1600 |
| Citizen | Citizen ProJet Ilc |
| Citizen | Citizen ProJet II |
| Cltoh | Cltoh M8510 |
| Compaq | Compaq IJ1200 |
| Compaq | Compaq IJ750 |
| Compaq | Compaq IJ900 |
| DEC | DEC LA75 Plus |
| DEC | DEC DECWriter 500i |
| DEC | DEC DECwriter 520ic |
| DEC | DEC LJ250 |
| DEC | DEC DECwriter 110i |
| DEC | DEC LN03 |
| DEC | DEC LN07 |
| DEC | DEC LN17 |
| DEC | DEC LA50 |
| DEC | DEC LA70 |
| DEC | DEC LA75 |
| DEC | DEC 1800 |
| Dell | Dell 3100cn |
| Dell | Dell 3010cn |
| Dell | Dell 1110 |
| Dell | Dell M5200 |
| Dell | Dell S2500 |

| | |
|-------|----------------------------|
| DNP | Dai Nippon Printing DS40 |
| DNP | Dai Nippon Printing DS80 |
| Epson | Epson Stylus Photo RX510 |
| Epson | Epson Stylus CX6400 |
| Epson | Epson PM D800 |
| Epson | Epson Stylus Pro 9600 |
| Epson | Epson LP-8100 |
| Epson | Epson Stylus TX300F |
| Epson | Epson LX-1050 |
| Epson | Epson MC 5000 |
| Epson | Epson PX V630 |
| Epson | Epson PX G5300 |
| Epson | Epson ME Office 1100 |
| Epson | EPSON AL-C2000 PS3 |
| Epson | Epson WorkForce 1100 |
| Epson | Epson Stylus Color 740 |
| Epson | Epson Stylus Photo EX |
| Epson | Epson Stylus WorkForce 610 |
| Epson | Epson Stylus CX5100 |
| Epson | Epson AL-C9200 |
| Epson | Epson Stylus Office T30 |
| Epson | Epson Stylus Office T33 |
| Epson | Epson Stylus Color I |
| Epson | Epson AL-C4000 |
| Epson | Epson Stylus Color 760 |
| Epson | Epson LP-8600 |
| Epson | Epson AL-C1900 |
| Epson | Epson Stylus Photo RX560 |
| Epson | Epson LP 8000 |
| Epson | Epson Stylus Color 777 |
| Epson | Epson Stylus Photo TX710W |
| Epson | Epson AL-M2300 |
| Epson | Epson Stylus Photo 700 |
| Epson | Epson Artisan 50 |
| Epson | Epson Stylus Pro 7000 |
| Epson | EPSON LP-9500CPS |
| Epson | Epson AL-M2310 |
| Epson | Epson Stylus DX4200 |
| Epson | EPSON LP-8500CPD |
| Epson | Epson Stylus C44SX |
| Epson | Epson LP-xx00 |
| Epson | Epson Stylus CX5600 |
| Epson | Epson Stylus Photo RX580 |

| | |
|-------|--|
| Epson | Epson Stylus Photo RX585 |
| Epson | Epson PM D870 |
| Epson | Epson Stylus Photo 720 |
| Epson | Epson Stylus 800 |
| Epson | Epson Stylus Photo RX590 |
| Epson | Epson Stylus Pro 4800/4880 Back Compatible |
| Epson | Epson Stylus Photo RX595 |
| Epson | EPSON AL-M8000 PS3 |
| Epson | Epson Stylus C44UX |
| Epson | Epson PX 401A |
| Epson | Epson PictureMate 2005 |
| Epson | Epson LQ-850 |
| Epson | Epson EPL-5900 |
| Epson | Epson Stylus Color 1160 |
| Epson | Epson EPL-N2500 |
| Epson | Epson Stylus DX9400F |
| Epson | Epson EPL-N2050 |
| Epson | Epson Stylus Office B30 |
| Epson | Epson Stylus T13 |
| Epson | Epson Stylus Office B33 |
| Epson | Epson Stylus Pro 7500 |
| Epson | Epson EP 801A |
| Epson | Epson Stylus Photo 750 |
| Epson | Epson Stylus CX9400F |
| Epson | Epson Stylus T20 |
| Epson | Epson Stylus T21 |
| Epson | Epson Stylus T22 |
| Epson | Epson Stylus T26 |
| Epson | Epson Offirio PX B300 |
| Epson | Epson LP-S6500 |
| Epson | Epson Stylus DX4250 |
| Epson | Epson Stylus T30 |
| Epson | Epson Stylus Photo 1200 |
| Epson | Epson Stylus Photo TX810FW |
| Epson | Epson Stylus Photo PX700W |
| Epson | Epson LP-8400F |
| Epson | EPSON AL-M2400 PS3 |
| Epson | Epson Stylus Photo 780 |
| Epson | Epson Stylus Photo 785 |
| Epson | Epson Stylus CX4800 |
| Epson | Epson B-300 |
| Epson | Epson B-308 |
| Epson | Epson Stylus T50 |

| | |
|-------|----------------------------|
| Epson | Epson Stylus T59 |
| Epson | Epson PM 700C |
| Epson | Epson Stylus Photo 790 |
| Epson | Epson EPL-N2550 |
| Epson | Epson PM G4500 |
| Epson | Epson Stylus Photo PX810FW |
| Epson | Epson LQ-2550 |
| Epson | Epson B-310 |
| Epson | Epson Stylus T60 |
| Epson | Epson Stylus CX3500 |
| Epson | Epson PM T960 |
| Epson | EPSON AL-M2000 PS3 |
| Epson | Epson AL-CX21 |
| Epson | Epson PictureMate 500 |
| Epson | Epson PM 880C |
| Epson | Epson Stylus Color IIs |
| Epson | Epson Stylus SX515 |
| Epson | Epson PM A900 |
| Epson | Epson AL-M8000 |
| Epson | Epson EPL-5900 PS3 |
| Epson | Epson ME Office 70 |
| Epson | Epson Stylus CX7400 |
| Epson | Epson LP-9100 |
| Epson | Epson Stylus Color 400 |
| Epson | Epson EPL-5800PS |
| Epson | Epson PM 750C |
| Epson | Epson ME 300 |
| Epson | Epson LP-1800 |
| Epson | Epson Stylus Photo 1270 |
| Epson | Epson Stylus C110 |
| Epson | Epson Stylus NX300 |
| Epson | Epson PM 9000C |
| Epson | Epson E 500 |
| Epson | EPSON EPL-N3000 PS3 |
| Epson | Epson Stylus Photo 1280 |
| Epson | Epson Stylus C120 |
| Epson | Epson ME Office 600F |
| Epson | Epson SQ 1170 |
| Epson | Epson PM A940 |
| Epson | Epson ME 320 |
| Epson | Epson Stylus Photo 1290 |
| Epson | Epson PX G5000 |
| Epson | Epson E 520 |

| | |
|-------|---------------------------|
| Epson | Epson PM A950 |
| Epson | Epson EPL-N3000 |
| Epson | Epson Stylus Color 440 |
| Epson | Epson LP-9600 |
| Epson | Epson Stylus Color 900 |
| Epson | Epson Stylus Photo 1290s |
| Epson | Epson Stylus Photo RX700 |
| Epson | Epson LP-M5000 |
| Epson | Epson LP-9600SPD |
| Epson | Epson Stylus Color 460 |
| Epson | Epson LP-9500C |
| Epson | Epson LQ-500 |
| Epson | Epson Stylus CX6600 |
| Epson | Epson Stylus Pro 9800 |
| Epson | Epson EPL-5700PS |
| Epson | Epson Stylus Photo R3000 |
| Epson | Epson Stylus Photo R200 |
| Epson | Epson AL-M2000 |
| Epson | Epson PictureMate Dash |
| Epson | Epson PM 670C |
| Epson | Epson Stylus Color 480 |
| Epson | Epson Stylus Photo R210 |
| Epson | Epson AL-M2010 |
| Epson | Epson Stylus C41SX |
| Epson | Epson Stylus CX5300 |
| Epson | Epson LP-7000 |
| Epson | Epson Stylus Photo R220 |
| Epson | Epson EP 901A |
| Epson | Epson EP 901F |
| Epson | Epson Stylus Photo R230 |
| Epson | Epson AL-C4200 |
| Epson | Epson PM 3500C |
| Epson | Epson Stylus C41UX |
| Epson | Epson LP-S7500 |
| Epson | EPSON AL-C9200 PS3 |
| Epson | Epson Stylus Photo 2200 |
| Epson | Epson Stylus Photo R240 |
| Epson | Epson Stylus Photo R245 |
| Epson | Epson Stylus Office B1100 |
| Epson | Epson Stylus TX200 |
| Epson | Epson PX 5500 |
| Epson | Epson PM 930C |
| Epson | EPSON AL-C9100 PS3 |

| | |
|-------|-------------------------|
| Epson | Epson AL-C1900 PS3 |
| Epson | Epson Stylus Photo 900 |
| Epson | Epson LP-8500C |
| Epson | Epson Stylus TX210 |
| Epson | Epson Stylus Color 980 |
| Epson | Epson Stylus DX4400 |
| Epson | Epson MachJet |
| Epson | Epson Stylus Photo 915 |
| Epson | Epson EPL-N2050PS |
| Epson | Epson MJ 8000C |
| Epson | Epson Stylus Photo R260 |
| Epson | Epson PM 850PT |
| Epson | Epson AL-C4000 PS3 |
| Epson | Epson Stylus Photo R265 |
| Epson | Epson Stylus CX5800 |
| Epson | Epson LP-7500 |
| Epson | Epson PM 7000C |
| Epson | Epson Stylus Photo 925 |
| Epson | Epson Stylus Photo P50 |
| Epson | Epson PM 800C |
| Epson | Epson Stylus Photo R270 |
| Epson | Epson Stylus Pro 9880 |
| Epson | Epson Stylus Pro 3800 |
| Epson | Epson Stylus Pro XL |
| Epson | EPSON AL-C3800 PS3 |
| Epson | Epson Stylus Photo 935 |
| Epson | Epson Stylus Photo R280 |
| Epson | Epson Stylus Photo R285 |
| Epson | Epson EP-702A |
| Epson | Epson Stylus Pro 9890 |
| Epson | Epson Stylus CX4500 |
| Epson | Epson EPL-5200+ |
| Epson | Epson AL-C8600 |
| Epson | Epson EPL-N2700 |
| Epson | Epson PictureMate Snap |
| Epson | Epson PM 980C |
| Epson | Epson Stylus Photo R290 |
| Epson | EPSON LP-9200CPL |
| Epson | Epson Stylus Pro 7700 |
| Epson | Epson MJ 520C |
| Epson | Epson Stylus CX8400 |
| Epson | Epson Stylus Photo 950 |
| Epson | Epson EM 930C |

| | |
|-------|-----------------------------|
| Epson | Epson Offirio PX B500 |
| Epson | Epson Stylus Office TX600FW |
| Epson | Epson Stylus DX4450 |
| Epson | Epson Stylus SX200 |
| Epson | Epson Stylus Photo 960 |
| Epson | Epson Stylus SX205 |
| Epson | Epson Stylus CX3200 |
| Epson | Epson MC 7000 |
| Epson | Epson PictureMate 200 |
| Epson | Epson Stylus Office SX600FW |
| Epson | Epson Stylus C20SX |
| Epson | Epson Stylus Photo 1400 |
| Epson | Epson Stylus SX210 |
| Epson | Epson Stylus SX215 |
| Epson | Epson PictureMate 210 |
| Epson | Epson PictureMate 215 |
| Epson | EPSON AL-CX21 PS3 |
| Epson | Epson Stylus |
| Epson | Epson Stylus Photo 1410 |
| Epson | Epson Stylus D120 |
| Epson | Epson Stylus Office TX300F |
| Epson | Epson Stylus C20UX |
| Epson | Epson EPL-N2750 |
| Epson | Epson Stylus SX510W |
| Epson | Epson E 200 |
| Epson | Epson Stylus Office T1100 |
| Epson | Epson Stylus TX550W |
| Epson | Epson PX 201 |
| Epson | Epson Stylus CX3700 |
| Epson | EPSON LP-9600SPD |
| Epson | Epson PictureMate 240 |
| Epson | Epson Stylus Pro 3880 |
| Epson | Epson Stylus Pro 9000 |
| Epson | Epson Stylus Pro 3885 |
| Epson | Epson Stylus Office T1110 |
| Epson | Epson Artisan 700 |
| Epson | Epson PictureMate 250 |
| Epson | Epson LP-M6000 |
| Epson | Epson AL-C2600 |
| Epson | Epson PM A650 |
| Epson | Epson Stylus Photo 2000P |
| Epson | Epson MJ 6000C |
| Epson | Epson Artisan 710 |



| | |
|-------|--|
| Epson | Epson PictureMate 260 |
| Epson | Epson PM 5000C |
| Epson | Epson LP-9600S |
| Epson | Epson LP-9300 |
| Epson | Epson PX V500 |
| Epson | Epson Stylus Color 600 |
| Epson | Epson Stylus Photo R1900 |
| Epson | Epson EPL-6100 |
| Epson | Epson PM 770C |
| Epson | Epson PictureMate 270 |
| Epson | Epson Stylus Photo RX400 |
| Epson | Epson PictureMate Deluxe |
| Epson | Epson E 700 |
| Epson | Epson PictureMate 280 |
| Epson | Epson Stylus CX9475F |
| Epson | Epson PX 601F |
| Epson | Epson Stylus CX6300 |
| Epson | Epson Stylus Pro 9500 |
| Epson | Epson ME Office 620F |
| Epson | Epson Stylus NX515 |
| Epson | Epson PictureMate 290 |
| Epson | Epson Stylus Photo RX420 |
| Epson | Epson Stylus Office BX600FW |
| Epson | Epson Stylus Photo RX425 |
| Epson | Epson LP-S300 |
| Epson | Epson Stylus Pro 11800/11880 Back Compatible |
| Epson | Epson E 720 |
| Epson | Epson Stylus Photo RX430 |
| Epson | Epson LP-S310 |
| Epson | Epson Stylus Color 640 |
| Epson | Epson Stylus D68 |
| Epson | Epson Stylus CX5000 |
| Epson | Epson AL-C9100 |
| Epson | Epson LP-8600F |
| Epson | Epson Stylus T22E |
| Epson | Epson CL 700 |
| Epson | Epson Stylus Color 660 |
| Epson | Epson Stylus D88 |
| Epson | Epson Stylus D92 |
| Epson | Epson Stylus Color 670 |
| Epson | Epson PM D750 |
| Epson | Epson Stylus Photo TX700W |
| Epson | Epson LP-9000B |

| | |
|-------|--------------------------|
| Epson | Epson LP-9000C |
| Epson | Epson Stylus Pro 4800 |
| Epson | Epson Stylus Color 680 |
| Epson | Epson Stylus C43SX |
| Epson | Epson Stylus CX5500 |
| Epson | Epson Stylus Color 8 3 |
| Epson | Epson PM D770 |
| Epson | Epson ActionLaser II |
| Epson | Epson B-508DN |
| Epson | Epson Stylus Color 1500 |
| Epson | Epson Stylus CX9400 |
| Epson | Epson PM G800 |
| Epson | Epson LP-2000 |
| Epson | Epson EPL-N2050PS+ |
| Epson | Epson CL 750 |
| Epson | Epson Stylus C43UX |
| Epson | EPSON EPL-N7000 PS3 |
| Epson | Epson Stylus Color PRO |
| Epson | Epson Stylus CX4200 |
| Epson | Epson Stylus TX400 |
| Epson | Epson CL 760 |
| Epson | Epson EPL-5800 |
| Epson | Epson PM 950C |
| Epson | Epson PM 3000C |
| Epson | Epson Stylus Color 1520 |
| Epson | Epson Stylus Color |
| Epson | Epson PM G820 |
| Epson | Epson Stylus TX410 |
| Epson | Epson PX G900 |
| Epson | Epson LP-8000C |
| Epson | Epson EM 900C |
| Epson | Epson Stylus S20 |
| Epson | Epson Stylus S21 |
| Epson | Epson LP-7700 |
| Epson | Epson Stylus Photo R2400 |
| Epson | Epson PX G920 |
| Epson | Epson LP-2500 |
| Epson | Epson AL-C8500PS |
| Epson | Epson PM G850 |
| Epson | Epson Stylus CX4700 |
| Epson | Epson Stylus Pro 4880 |
| Epson | Epson EPL-6100 PS3 |
| Epson | Epson Stylus S50 |

| | |
|-------|--------------------------|
| Epson | Epson PM 2000C |
| Epson | Epson PX 7000 |
| Epson | Epson AL-M4000 |
| Epson | Epson AL-C8600 PS3 |
| Epson | Epson Stylus SX400 |
| Epson | Epson Stylus SX405 |
| Epson | Epson MJ 930C |
| Epson | Epson EPL-N1600 |
| Epson | Epson EPL-7100 |
| Epson | Epson PM 870C |
| Epson | EPSON EPL-5900 PS3 |
| Epson | Epson Stylus SX410 |
| Epson | Epson Stylus SX415 |
| Epson | Epson WorkForce 600 |
| Epson | Epson Stylus DX3800 |
| Epson | Epson MC 2000 |
| Epson | Epson LP-7000G |
| Epson | Epson WorkForce 610 |
| Epson | Epson WorkForce 615 |
| Epson | EPSON AL-MX21 PS3 |
| Epson | Epson Stylus Color 300 |
| Epson | Epson PM 740C |
| Epson | Epson PM 3700C |
| Epson | Epson PM A820 |
| Epson | Epson Dot Matrix |
| Epson | Epson Stylus NX200 |
| Epson | Epson LQ-24 |
| Epson | Epson Stylus CX6000 |
| Epson | Epson PM 10000 |
| Epson | Epson Stylus NX215 |
| Epson | Epson Stylus DX7000F |
| Epson | Epson MJ 5100C |
| Epson | Epson Stylus CX7000F |
| Epson | Epson Stylus Pro 4000 |
| Epson | Epson AL-C2800 |
| Epson | Epson Stylus CX7800 |
| Epson | Epson Stylus DX3850 |
| Epson | Epson PictureMate Flash |
| Epson | Epson Stylus Color 800 |
| Epson | Epson Stylus Photo RX600 |
| Epson | Epson LP-S3000 |
| Epson | Epson Stylus Photo |
| Epson | Epson B-500DN |

| | |
|-------|--------------------------|
| Epson | EPSON AL-MX20 PS3 |
| Epson | Epson PX 1001 |
| Epson | Epson Stylus Photo RX610 |
| Epson | Epson Stylus CX6500 |
| Epson | Epson L-1000 |
| Epson | Epson Stylus Pro 9700 |
| Epson | Epson Stylus Photo RX620 |
| Epson | Epson PM A890 |
| Epson | Epson EPL-N1600PS |
| Epson | Epson LP-3000 |
| Epson | Epson Stylus T40W |
| Epson | Epson Stylus Photo RX630 |
| Epson | Epson MC 9000 |
| Epson | Epson ActionLaser 1100 |
| Epson | Epson Stylus C40SX |
| Epson | Epson AL-C2000 PS3 |
| Epson | Epson Stylus CX5200 |
| Epson | Epson Stylus Photo RX640 |
| Epson | Epson Stylus Color 850 |
| Epson | Epson LP-S3500 |
| Epson | EPSON LP-9100PS3 |
| Epson | Epson AL-C4100 |
| Epson | Epson Stylus Color 860 |
| Epson | Epson Stylus C40UX |
| Epson | EPSON AL-C4200 PS3 |
| Epson | EPSON AL-C1900 PS3 |
| Epson | Epson PictureMate |
| Epson | Epson LP-8700 |
| Epson | Epson Stylus Photo 2100 |
| Epson | Epson Stylus TX100 |
| Epson | Epson Stylus TX101 |
| Epson | EPSON AL-C4100 PS3 |
| Epson | Epson Stylus TX102 |
| Epson | Epson Stylus TX103 |
| Epson | Epson Stylus TX104 |
| Epson | Epson Stylus TX105 |
| Epson | Epson Stylus TX106 |
| Epson | Epson Stylus TX109 |
| Epson | Epson AL-M2400 |
| Epson | Epson Stylus Scan 2000 |
| Epson | EPSON AL-C4000 PS3 |
| Epson | Epson PX V780 |
| Epson | Epson Stylus TX110 |

| | |
|-------|--------------------------|
| Epson | Epson MC 10000 |
| Epson | Epson Stylus Color 880 |
| Epson | Epson AL-M2410 |
| Epson | Epson Stylus Photo 810 |
| Epson | Epson Stylus Photo RX680 |
| Epson | Epson Stylus CX5700 |
| Epson | Epson Stylus Photo RX685 |
| Epson | Epson EPL-N2120 |
| Epson | Epson Stylus Photo 820 |
| Epson | Epson Stylus Photo 825 |
| Epson | Epson Stylus Photo RX690 |
| Epson | Epson Stylus CX5000F |
| Epson | Epson Stylus Office T40W |
| Epson | Epson LP-2200 |
| Epson | Epson Stylus Photo 830 |
| Epson | Epson LP-9800C |
| Epson | Epson PM 4000PX |
| Epson | Epson Stylus CX4400 |
| Epson | Epson AL-C8500 |
| Epson | Epson PM 970C |
| Epson | Epson Stylus Scan 2500 |
| Epson | Epson Stylus Pro 10000 |
| Epson | Epson Stylus Pro 7600 |
| Epson | Epson AL-MX20 |
| Epson | Epson AL-MX21 |
| Epson | Epson Stylus CX8300 |
| Epson | Epson Stylus TX615 |
| Epson | EPSON AL-M2410 PS3 |
| Epson | Epson ME Office 700FW |
| Epson | Epson Stylus DX4800 |
| Epson | Epson B-310N |
| Epson | Epson LP-7900 |
| Epson | Epson Stylus SX100 |
| Epson | Epson Stylus SX105 |
| Epson | Epson Stylus CX3100 |
| Epson | Epson PictureMate 100 |
| Epson | Epson Stylus Pro 11800 |
| Epson | Epson EPL-N2500 PS3 |
| Epson | Epson Stylus SX110 |
| Epson | Epson Stylus Photo 870 |
| Epson | EPSON AL-M2010 PS3 |
| Epson | Epson Stylus SX115 |
| Epson | Epson Stylus Photo 875 |

| | |
|-------|---------------------------|
| Epson | Epson Stylus Photo PX710W |
| Epson | Epson AL-C2000 |
| Epson | Epson Stylus CX4900 |
| Epson | Epson Stylus Color 3000 |
| Epson | Epson WorkForce 310 |
| Epson | Epson WorkForce 315 |
| Epson | Epson Stylus DX7400 |
| Epson | Epson LP-8800C |
| Epson | Epson Stylus TX650 |
| Epson | Epson Stylus Photo 890 |
| Epson | Epson Stylus TX659 |
| Epson | Epson Stylus Photo 895 |
| Epson | Epson Stylus Pro 5000 |
| Epson | Epson Stylus SX600FW |
| Epson | Epson AL-C3800 |
| Epson | EPSON EPL-N2550 PS3 |
| Epson | Epson E 100 |
| Epson | Epson Stylus DX4850 |
| Epson | Epson Stylus Photo PX650 |
| Epson | Epson LP-3000C |
| Epson | Epson PX 101 |
| Epson | Epson LP-8300CPD |
| Epson | Epson Stylus CX3600 |
| Epson | Epson LP-S4000 |
| Epson | Epson B-510DN |
| Epson | Epson LP-9200B |
| Epson | Epson LP-9200C |
| Epson | Epson Stylus SX615 |
| Epson | Epson LQ-570+ |
| Epson | Epson Stylus C20 |
| Epson | Epson Stylus Color 500 |
| Epson | Epson Stylus Photo R1800 |
| Epson | Epson PM 760C |
| Epson | Epson PM D1000 |
| Epson | Epson PX A650 |
| Epson | Epson Stylus DX7450 |
| Epson | Epson LP-1900 |
| Epson | Epson Stylus Pro 5500 |
| Epson | Epson Stylus NX400 |
| Epson | EPSON AL-M4000 PS3 |
| Epson | Epson EPL-N2050+ |
| Epson | Epson Stylus Pro 11880 |
| Epson | Epson Stylus C40 |

| | |
|-------|-------------------------|
| Epson | Epson Stylus C41 |
| Epson | Epson Stylus C42 |
| Epson | Epson Stylus C43 |
| Epson | Epson LP-S4500 |
| Epson | Epson Stylus C44 |
| Epson | Epson Stylus C45 |
| Epson | Epson Stylus C46 |
| Epson | Epson Stylus C48 |
| Epson | Epson PM D600 |
| Epson | Epson E 150 |
| Epson | Epson Stylus NX415 |
| Epson | Epson Stylus SX650 |
| Epson | Epson Stylus CX3650 |
| Epson | Epson Stylus C50 |
| Epson | EPSON LP-8800CPS |
| Epson | Epson Stylus Photo 830U |
| Epson | EPSON LP-9800CPL |
| Epson | Epson Stylus Color II |
| Epson | Epson WorkForce 30 |
| Epson | Epson LP-8200C |
| Epson | Epson LP-S210 |
| Epson | Epson Stylus C60 |
| Epson | Epson Stylus C61 |
| Epson | Epson Stylus C62 |
| Epson | Epson Stylus C63 |
| Epson | Epson Stylus C64 |
| Epson | Epson Stylus C65 |
| Epson | Epson Stylus C66 |
| Epson | Epson Stylus C68 |
| Epson | Epson WorkForce 40 |
| Epson | Epson Stylus C70 |
| Epson | Epson Stylus C79 |
| Epson | Epson EPL-N7000 |
| Epson | Epson Stylus C80 |
| Epson | Epson Stylus C82 |
| Epson | Epson Stylus C83 |
| Epson | Epson Stylus C84 |
| Epson | Epson Stylus C85 |
| Epson | Epson Stylus C86 |
| Epson | Epson Stylus C87 |
| Epson | Epson Stylus C88 |
| Epson | EPSON EPL-N2700 PS3 |
| Epson | Epson AL-2600 |

| | |
|-------|----------------------------|
| Epson | Epson EPL-5200 |
| Epson | Epson Stylus Photo R300 |
| Epson | Epson PX G5600 |
| Epson | Epson Stylus CX1500 |
| Epson | EPSON EPL-N2500 PS3 |
| Epson | Epson Stylus Color 580 |
| Epson | Epson PM 2200C |
| Epson | Epson Stylus Photo R310 |
| Epson | Epson Stylus DX4000 |
| Epson | Epson PX 9000 |
| Epson | Epson Stylus C42SX |
| Epson | Epson Stylus CX5400 |
| Epson | Epson Stylus Photo R320 |
| Epson | Epson PM G700 |
| Epson | Epson Stylus Office BX300F |
| Epson | Epson Stylus C42UX |
| Epson | Epson LP-8900 |
| Epson | Epson Stylus Photo R340 |
| Epson | Epson Stylus CX4100 |
| Epson | Epson EPL-5700 |
| Epson | Epson Stylus Photo R800 |
| Epson | Epson PM 940C |
| Epson | Epson PM G720 |
| Epson | Epson Stylus Photo R350 |
| Epson | Epson PM G730 |
| Epson | Epson Stylus Photo R360 |
| Epson | Epson Stylus DX4050 |
| Epson | Epson Stylus DX8400 |
| Epson | Epson Stylus TX610FW |
| Epson | EPSON LP-8300CPD |
| Epson | EPSON EPL-6200 PS3 |
| Epson | Epson LP-2400 |
| Epson | Epson Stylus SX610FW |
| Epson | Epson Stylus Office B40W |
| Epson | EPSON EPL-6100 PS3 |
| Epson | Epson Stylus Photo R380 |
| Epson | Epson Stylus Photo EX3 |
| Epson | Epson Stylus CX4600 |
| Epson | Epson Stylus Photo R390 |
| Epson | Epson ME Office 80W |
| Epson | EPSON AL-2600 PS3 |
| Epson | Epson LP-8500CPD |
| Epson | Epson Stylus Pro 7800 |

| | |
|-------|----------------------------|
| Epson | EPSON AL-C8600 PS3 |
| Epson | Epson ME Office 360 |
| Epson | Epson EPL-N2750PS |
| Epson | Epson Stylus DX8450 |
| Epson | Epson WorkForce 500 |
| Epson | Epson Stylus CX9300F |
| Epson | Epson PM 3300C |
| Epson | Epson EP 702A |
| Epson | Epson Stylus TX510FN |
| Epson | Epson Stylus Color 200 |
| Epson | Epson PM 790PT |
| Epson | Epson PM 730C |
| Epson | Epson Stylus Photo TX800FW |
| Epson | Epson Stylus NX100 |
| Epson | Epson Stylus NX105 |
| Epson | Epson EP 302 |
| Epson | Epson LP-8300C |
| Epson | Epson E 300 |
| Epson | Epson LP-8300F |
| Epson | Epson Stylus CX3800 |
| Epson | Epson Stylus CX3805 |
| Epson | Epson LP-S4200 |
| Epson | Epson ActionPrinter 3250 |
| Epson | Epson Stylus NX115 |
| Epson | Epson Artisan 800 |
| Epson | EPSON AL-C2800 PS3 |
| Epson | Epson Stylus CX3810 |
| Epson | Epson EP-302 |
| Epson | Epson PM A750 |
| Epson | Epson Artisan 810 |
| Epson | Epson Stylus Photo PX800FW |
| Epson | Epson Stylus CX7700 |
| Epson | Epson PictureMate Pal |
| Epson | Epson LP-S8100 |
| Epson | Epson Stylus Pro 7880 |
| Epson | Epson LP-9400 |
| Epson | EPSON AL-C2600 PS3 |
| Epson | Epson PX V600 |
| Epson | Epson EPL-6200 |
| Epson | Epson PM 780C |
| Epson | Epson Stylus Pro 7890 |
| Epson | Epson Stylus Photo RX500 |
| Epson | Epson Stylus Photo R2880 |



| | |
|-----------|---|
| Fujifilm | Fujifilm Printpix-CX-400 |
| Fujifilm | Fujifilm FinePix-NX-500 |
| Fujifilm | Fujifilm Printpix-CX-550 |
| Fujitsu | Fujitsu PrintPartner 8000 |
| Fujitsu | Fujitsu FMPR |
| Fujitsu | Fujitsu 1200 |
| Fujitsu | Fujitsu PrintPartner 20W |
| Fujitsu | Fujitsu 2400 |
| Fujitsu | Fujitsu 3400 |
| Fujitsu | Fujitsu FMLBP2xx Page Printer |
| Fujitsu | Fujitsu PrintPartner 16DV |
| Fujitsu | Fujitsu PrintPartner 10V |
| Generic | Generic PCL 4 LF Printer |
| Generic | Generic GDI Printer |
| Generic | Generic PostScript Level 1 Printer |
| Generic | Generic PCL 5e LF Printer |
| Generic | Generic PCL 5 Printer |
| Generic | Generic PCL 6/PCL XL LF Printer |
| Generic | Generic PCL 5c Printer |
| Generic | Generic PCL 5c LF Printer |
| Generic | Generic IBM-Compatible Dot Matrix Printer |
| Generic | Generic PCL 4 Printer |
| Generic | Generic ESC/P Dot Matrix Printer |
| Generic | Generic PCL 6/PCL XL Printer |
| Generic | Generic PCL 3 Printer |
| Generic | Generic PCL 5 LF Printer |
| Generic | Generic PCL 5e Printer |
| Generic | Generic PostScript Printer |
| Genicom | Genicom microLaser 12 |
| Genicom | Genicom microLaser 210 |
| Genicom | Genicom ML450 |
| Genicom | Genicom LN45 |
| Gestetner | Gestetner MP C6501 |
| Gestetner | Gestetner 3212 |
| Gestetner | Gestetner MP 2550 |
| Gestetner | Gestetner MP 9001 |
| Gestetner | Gestetner DSm415 |
| Gestetner | Gestetner C7528n |
| Gestetner | Gestetner MPC1500/GS106 |
| Gestetner | Gestetner P7245 |
| Gestetner | Gestetner MP2000/DSm721d |
| Gestetner | Gestetner Pro 1357EX |
| Gestetner | Gestetner C7116 |

| | |
|-----------|---------------------------|
| Gestetner | Gestetner MP 161/DSm416 |
| Gestetner | Gestetner MP 2510/DSm725e |
| Gestetner | Gestetner DSc524 |
| Gestetner | Gestetner DSc532 |
| Gestetner | Gestetner Pro 906EX |
| Gestetner | Gestetner SP C430DN |
| Gestetner | Gestetner DSm618d |
| Gestetner | Gestetner MP 3010/DSm730e |
| Gestetner | Gestetner MP C7500 |
| Gestetner | Gestetner MP C7501 |
| Gestetner | Gestetner C7640nD |
| Gestetner | Gestetner F9199/9199nf |
| Gestetner | Gestetner P7535n |
| Gestetner | Gestetner MP C2800 |
| Gestetner | Gestetner 3532/4235g |
| Gestetner | Gestetner 4532/4245g |
| Gestetner | Gestetner GWD2004 |
| Gestetner | Gestetner GWD2006 |
| Gestetner | Gestetner MP 4000 |
| Gestetner | Gestetner MP 4001 |
| Gestetner | Gestetner 6002 |
| Gestetner | Gestetner DSm615 |
| Gestetner | Gestetner DSm616 |
| Gestetner | Gestetner DSm618 |
| Gestetner | Gestetner DSm620 |
| Gestetner | Gestetner DSm622 |
| Gestetner | Gestetner DSm627 |
| Gestetner | Gestetner P7325n |
| Gestetner | Gestetner DSc224 |
| Gestetner | Gestetner DSm651 |
| Gestetner | Gestetner DSc232 |
| Gestetner | Gestetner DSm660 |
| Gestetner | Gestetner GWD5100 |
| Gestetner | Gestetner DSm675 |
| Gestetner | Gestetner MP C3300 |
| Gestetner | Gestetner 10512 |
| Gestetner | Gestetner MP 3350B |
| Gestetner | Gestetner P7031n |
| Gestetner | Gestetner SP 8200DN |
| Gestetner | Gestetner MP C2050 |
| Gestetner | Gestetner Pro 1107EX |
| Gestetner | Gestetner DSm735/735G |
| Gestetner | Gestetner MP4500/DSm745e |

| | |
|-----------|--------------------------|
| Gestetner | Gestetner MP 5000 |
| Gestetner | Gestetner MP 5001 |
| Gestetner | Gestetner P7035n |
| Gestetner | Gestetner MP C2550 |
| Gestetner | Gestetner P7126 |
| Gestetner | Gestetner 7502 |
| Gestetner | Gestetner MP5500/DSm755 |
| Gestetner | Gestetner P7145 |
| Gestetner | Gestetner Pro 1356EX |
| Gestetner | Gestetner C7435n |
| Gestetner | Gestetner C7526dn |
| Gestetner | Gestetner C7010 |
| Gestetner | Gestetner DSc424 |
| Gestetner | Gestetner DSc428 |
| Gestetner | Gestetner DSc432 |
| Gestetner | Gestetner DSc435 |
| Gestetner | Gestetner DSm645/645G |
| Gestetner | Gestetner DSc445 |
| Gestetner | Gestetner P7675 |
| Gestetner | Gestetner DSc460 |
| Gestetner | Gestetner MP6500/DSm765 |
| Gestetner | Gestetner MPC2500/DSc525 |
| Gestetner | Gestetner MP1600/DSm716 |
| Gestetner | Gestetner P7132n |
| Gestetner | Gestetner MP 6000 |
| Gestetner | Gestetner MP 6001 |
| Gestetner | Gestetner P7431cn |
| Gestetner | Gestetner C7531dn |
| Gestetner | Gestetner MPC3000/DSc530 |
| Gestetner | Gestetner P7527n |
| Gestetner | Gestetner MP2500/DSm625 |
| Gestetner | Gestetner MP7500/DSm775 |
| Gestetner | Gestetner MPC3500/DSc535 |
| Gestetner | Gestetner C7535n |
| Gestetner | Gestetner SP 4210N |
| Gestetner | Gestetner GWD7140 |
| Gestetner | Gestetner MP C4000 |
| Gestetner | Gestetner P7325 |
| Gestetner | Gestetner MP1100/DSm7110 |
| Gestetner | Gestetner DSm620d |
| Gestetner | Gestetner MPC4500/DSc545 |
| Gestetner | Gestetner MP 2550B |
| Gestetner | Gestetner MP 7000 |

| | |
|-----------|--------------------------|
| Gestetner | Gestetner MP 7001 |
| Gestetner | Gestetner 9002 |
| Gestetner | Gestetner C8140ND |
| Gestetner | Gestetner MP 171 |
| Gestetner | Gestetner Pro 907EX |
| Gestetner | Gestetner MP 5000B |
| Gestetner | Gestetner MP9000/DSm790 |
| Gestetner | Gestetner SP W2470 |
| Gestetner | Gestetner SP C431DN |
| Gestetner | Gestetner DSc38 |
| Gestetner | Gestetner Pro 1106EX |
| Gestetner | Gestetner MP 4000B |
| Gestetner | Gestetner MP C5000 |
| Gestetner | Gestetner P7026n |
| Gestetner | Gestetner 3502 |
| Gestetner | Gestetner P7026 |
| Gestetner | Gestetner MP 2851 |
| Gestetner | Gestetner P7032 |
| Gestetner | Gestetner MP1350/DSm7135 |
| Gestetner | Gestetner 2212 |
| Gestetner | Gestetner MP 8000 |
| Gestetner | Gestetner MP 8001 |
| Gestetner | Gestetner P7031nL |
| Gestetner | Gestetner P7527 |
| Gestetner | Gestetner DSm725 |
| Gestetner | Gestetner DSm730 |
| Gestetner | Gestetner C8150ND |
| Gestetner | Gestetner CS555 |
| Gestetner | Gestetner 2712 |
| Gestetner | Gestetner DSc328 |
| Gestetner | Gestetner DSc332 |
| Gestetner | Gestetner C7416 |
| Gestetner | Gestetner C7417 |
| Gestetner | Gestetner DSc338 |
| Gestetner | Gestetner SP 6330N |
| Gestetner | Gestetner P7575 |
| Gestetner | Gestetner DSm635/635G |
| Gestetner | Gestetner C7425dn |
| Gestetner | Gestetner MP3500/DSm735e |
| Gestetner | Gestetner DSc38u |
| Gestetner | Gestetner MP 3350 |
| Gestetner | Gestetner MP 3351 |
| Gestetner | Gestetner MP C6000 |

| | |
|------------|--------------------------------------|
| Gestetner | Gestetner P7126n |
| Gestetner | Gestetner 4502 |
| Gestetner | Gestetner C7521n |
| Gestetner | Gestetner DSm745/745G |
| Gestetner | Gestetner SP C420DN |
| Heidelberg | Heidelberg Digimaster 9110 |
| Hitachi | Hitachi DDP 70 with MicroPress |
| HP | HP Photosmart 3100 Series |
| HP | HP Photosmart c4340 Series |
| HP | HP PSC 1310 Series |
| HP | HP Color LaserJet 5/5M |
| HP | HP Designjet T770ps 24in |
| HP | HP LaserJet m1537dnf MFP |
| HP | HP Deskjet f2400 Series |
| HP | HP Color LaserJet CP5220 Series |
| HP | HP LaserJet m4349 MFP |
| HP | HP Color LaserJet cp2025 |
| HP | HP LaserJet Professional m1219nf MFP |
| HP | HP OfficeJet K80xi |
| HP | HP Photosmart a610 Series |
| HP | HP Color LaserJet cp4520 Series |
| HP | HP LaserJet 9065 MFP |
| HP | HP Business Inkjet 1100 |
| HP | HP Deskjet d4300 Series |
| HP | HP Deskjet f4213 Series |
| HP | HP Deskjet d1600 Series |
| HP | HP DeskJet 955C |
| HP | HP LaserJet 9000 Series |
| HP | HP DeskJet 600 |
| HP | HP Deskjet 3070 b611 Series |
| HP | HP Photosmart 7150 |
| HP | HP LaserJet 5mp |
| HP | HP Designjet 4500ps |
| HP | HP Deskjet 5900 Series |
| HP | HP CM8060 Color MFP |
| HP | HP Photosmart Plus b209a-m |
| HP | HP Deskjet 670c |
| HP | HP Officejet k7100 |
| HP | HP LaserJet 2P Plus |
| HP | HP Color LaserJet cp1514n |
| HP | HP LaserJet 4000 |
| HP | HP Photosmart a530 Series |
| HP | HP LaserJet M9040 M9050 MFP |



| | |
|----|--------------------------------------|
| HP | HP DeskJet 870C |
| HP | HP PSC 2110 |
| HP | HP Photosmart c5500 Series |
| HP | HP Officejet v40xi |
| HP | HP LaserJet Professional m1213nf MFP |
| HP | HP DeskJet 957C |
| HP | HP LaserJet Professional m1136 MFP |
| HP | HP LaserJet 1320n |
| HP | HP Officejet 4300 Series |
| HP | HP Color LaserJet cp1515n |
| HP | HP Photosmart d7500 Series |
| HP | HP DeskJet 825C |
| HP | HP LaserJet Professional m1212nf MFP |
| HP | HP Photosmart b109a Series |
| HP | HP LaserJet 4V/4MV |
| HP | HP Deskjet 672c |
| HP | HP DeskJet 350C |
| HP | HP PaintJet |
| HP | HP LaserJet Professional P 1102w |
| HP | HP OfficeJet 300 |
| HP | HP LaserJet CP1520 Series |
| HP | HP Color LaserJet CM6030 MFP |
| HP | HP Photosmart c309a Series |
| HP | HP Color LaserJet 4600 |
| HP | HP Deskjet f4210 Series |
| HP | HP DeskJet 959C |
| HP | HP LaserJet 4200 Series |
| HP | HP DesignJet 430 |
| HP | HP Officejet Pro k5400 |
| HP | HP Color LaserJet cp1215 |
| HP | HP Officejet 4500 k710 |
| HP | HP 2563 |
| HP | HP Photosmart 1115 |
| HP | HP Photosmart b110 Series |
| HP | HP Deskjet 1600c |
| HP | HP Deskjet 9300 |
| HP | HP Color LaserJet CM3530 MFP |
| HP | HP Color LaserJet 4610 |
| HP | HP Color LaserJet 8500 |
| HP | HP Deskjet 930c |
| HP | HP PSC 2150 |
| HP | HP Color LaserJet cm2320nf MFP |
| HP | HP PhotoSmart 7150 |

| | |
|----|---------------------------------|
| HP | HP Deskjet Ink Adv 2060 k110 |
| HP | HP LaserJet M1536dnf MFP |
| HP | HP Designjet T1300 PostScript |
| HP | HP Officejet Pro 8000 a809 |
| HP | HP LaserJet 5si |
| HP | HP OfficeJet 330 |
| HP | HP LaserJet 4050 |
| HP | HP PSC 1000 Series |
| HP | HP DeskJet 610C |
| HP | HP LaserJet P3010 Series |
| HP | HP LaserJet m9040 MFP |
| HP | HP Officejet 6000 e609a |
| HP | HP PSC 920 |
| HP | HP DesignJet 500ps |
| HP | HP Officejet 6000 e609n |
| HP | HP Deskjet f300 Series |
| HP | HP LaserJet M1522 MFP Series |
| HP | HP OfficeJet |
| HP | HP Deskjet 932c |
| HP | HP Color LaserJet 4730mfp |
| HP | HP Photosmart d5300 Series |
| HP | HP Designjet 4520mfp |
| HP | HP DesignJet 3500CP |
| HP | HP Color LaserJet cp5520 Series |
| HP | HP LaserJet 3200 |
| HP | HP OfficeJet 350 |
| HP | HP DeskJet 6122 |
| HP | HP DeskJet 6127 |
| HP | HP Deskjet 933c |
| HP | HP Deskjet d2600 Series |
| HP | HP DeskJet 612C |
| HP | HP Color LaserJet 4650 |
| HP | HP Deskjet 9800 |
| HP | HP LaserJet M1522n MFP |
| HP | HP LaserJet 9040 MFP |
| HP | HP Deskjet 934c |
| HP | HP Deskjet 1000 j110 Series |
| HP | HP PSC 1500 Series |
| HP | HP Deskjet 980c |
| HP | HP PSC 950 |
| HP | HP Color LaserJet 8550 |
| HP | HP Deskjet 935c |
| HP | HP LaserJet P2010 |



| | |
|----|-------------------------------|
| HP | HP Color LaserJet 3800 |
| HP | HP LaserJet P2015 |
| HP | HP Photosmart 420 Series |
| HP | HP DeskJet 660C |
| HP | HP DesignJet 5000 |
| HP | HP LaserJet p2015d Series |
| HP | HP Photosmart 7800 Series |
| HP | HP PSC 2150 Series |
| HP | HP LaserJet cp1025nw |
| HP | HP OfficeJet 9100 |
| HP | HP PhotoSmart P1100 |
| HP | HP Deskjet 850c |
| HP | HP Color LaserJet 2500 |
| HP | HP CM8050 MFP with Edgeline |
| HP | HP LaserJet p2035n |
| HP | HP LaserJet 4ML |
| HP | HP LaserJet 4MP |
| HP | HP PhotoSmart P1115 |
| HP | HP OfficeJet T45 |
| HP | HP Officejet Pro I7700 |
| HP | HP Color LaserJet cm4730 MFP |
| HP | HP LaserJet p4515tn |
| HP | HP LaserJet p1505n |
| HP | HP LaserJet P4010 Series |
| HP | HP Officejet Pro 8100 |
| HP | HP Officejet j4660 Series |
| HP | HP Photosmart d5060 Series |
| HP | HP Deskjet 3320 |
| HP | HP Deskjet f4400 Series |
| HP | HP Deskjet 3325 |
| HP | HP LaserJet M5035 MFP |
| HP | HP Officejet Pro 1170c Series |
| HP | HP OfficeJet T65 |
| HP | HP DeskJet 920C |
| HP | HP DesignJet 5500 |
| HP | HP Photosmart a640 Series |
| HP | HP LaserJet 4100 MFP |
| HP | HP LaserJet 2410 |
| HP | HP LaserJet 4100 MFP |
| HP | HP Color LaserJet CP3505 |
| HP | HP LaserJet 5200LX |
| HP | HP Color LaserJet 5 |
| HP | HP LaserJet 1300xi |

| | |
|----|--------------------------------|
| HP | HP CM8050 Color MFP |
| HP | HP LaserJet 100 color MFP M175 |
| HP | HP LaserJet 2420 |
| HP | HP Designjet T7100ps |
| HP | HP LaserJet 3P w/ PCL5 |
| HP | HP Deskjet 855c |
| HP | HP Envy 100 d410 Series |
| HP | HP LaserJet 1100 |
| HP | HP PSC 2500 Series |
| HP | HP Color LaserJet CM6049 MFP |
| HP | HP LaserJet 2430 |
| HP | HP LaserJet p4515xm |
| HP | HP Color LaserJet 2550 |
| HP | HP Color LaserJet CP3525 |
| HP | HP Deskjet 3810 |
| HP | HP Deskjet 3816 |
| HP | HP Deskjet 3819 |
| HP | HP Deskjet d730 |
| HP | HP LaserJet 5000 |
| HP | HP Officejet 6300 Series |
| HP | HP DesignJet 2500CP PS3 |
| HP | HP Officejet Series 600 |
| HP | HP Officejet Pro 8600 |
| HP | HP Color LaserJet cp3505 |
| HP | HP Deskjet 3820 |
| HP | HP Deskjet 3822 |
| HP | HP LaserJet 4Si |
| HP | HP Photosmart p1000 |
| HP | HP DeskJet 970C |
| HP | HP Officejet Series 610 |
| HP | HP Deskjet f2200 Series |
| HP | HP LaserJet M4349 MFP |
| HP | HP Officejet j6400 Series |
| HP | HP Photosmart d110 Series |
| HP | HP Business Inkjet 2250TN |
| HP | HP Color LaserJet cp3525 |
| HP | HP CM8060 MFP with Edgeline |
| HP | HP Deskjet 3840 |
| HP | HP Deskjet 640c |
| HP | HP Deskjet d4100 Series |
| HP | HP Officejet r40 |
| HP | HP DesignJet 100 |
| HP | HP Officejet r45 |



| | |
|----|--|
| HP | HP LaserJet m4345 MFP |
| HP | HP DeskJet 310 |
| HP | HP Officejet k80xi |
| HP | HP Officejet Series 630 |
| HP | HP DeskJet Portable |
| HP | HP LaserJet m9059 MFP |
| HP | HP Business Inkjet 2600 |
| HP | HP DeskJet 840C |
| HP | HP Color LaserJet CP4020-CP4520 Series |
| HP | HP LaserJet Professional m1216nfh MFP |
| HP | HP LaserJet 1150 |
| HP | HP Deskjet d1400 Series |
| HP | HP DesignJet 110 |
| HP | HP DeskJet 320 |
| HP | HP LaserJet 4150 Series |
| HP | HP LaserJet p2015 Series |
| HP | HP Color LaserJet 9500 |
| HP | HP Color LaserJet 2500 Series |
| HP | HP Deskjet 5100 |
| HP | HP DeskJet 841C |
| HP | HP Color LaserJet CP1510 Series |
| HP | HP DeskJet 1600CM |
| HP | HP LaserJet 4345 MFP |
| HP | HP LaserJet 1160 |
| HP | HP Color LaserJet CP5520 Series |
| HP | HP Photosmart c5300 Series |
| HP | HP Officejet r60 |
| HP | HP DesignJet 120 |
| HP | HP Officejet r65 |
| HP | HP Officejet 4100 Series |
| HP | HP Photosmart d7300 Series |
| HP | HP Deskjet 3870 |
| HP | HP DeskJet 842C |
| HP | HP Photosmart 7345 |
| HP | HP LaserJet M1522nf MFP |
| HP | HP DeskJet 710C |
| HP | HP DesignJet 130 |
| HP | HP DeskJet 975C |
| HP | HP Officejet Lx |
| HP | HP Officejet r40xi |
| HP | HP DeskJet 843C |
| HP | HP Photosmart 7350 |
| HP | HP LaserJet Professional m1132 MFP |

| | |
|----|---------------------------------|
| HP | HP Officejet r80 |
| HP | HP Deskjet 690c |
| HP | HP Deskjet 3050a j611 Series |
| HP | HP OfficeJet G55 |
| HP | HP DeskJet 1600C |
| HP | HP LaserJet 4200 |
| HP | HP LaserJet 4 Plus |
| HP | HP DeskJet 890C |
| HP | HP DeskJet 712C |
| HP | HP LaserJet 4000 Series |
| HP | HP LaserJet 1300 Series |
| HP | HP Color LaserJet 3000 |
| HP | HP LaserJet p4015dn |
| HP | HP Designjet Z6100ps 42in Photo |
| HP | HP Officejet 7300 Series |
| HP | HP DeskJet 845C |
| HP | HP LaserJet 8100 |
| HP | HP Deskjet 5600 |
| HP | HP Deskjet 500 |
| HP | HP DeskJet 505J Plus |
| HP | HP LaserJet P3004 |
| HP | HP LaserJet 1100xi |
| HP | HP LaserJet P3005 |
| HP | HP Designjet T1120ps 44in |
| HP | HP OfficeJet 500 |
| HP | HP Deskjet 510 |
| HP | HP Photosmart 370 Series |
| HP | HP Photosmart c3100 Series |
| HP | HP OfficeJet G85 |
| HP | HP Photosmart d5100 Series |
| HP | HP Photosmart 1315 |
| HP | HP dj350 |
| HP | HP Color LaserJet cp5225dn |
| HP | HP LaserJet cm1411fn |
| HP | HP Deskjet 648c |
| HP | HP LaserJet m2727 MFP |
| HP | HP Deskjet 520 |
| HP | HP Color Inkjet Printer CP1160 |
| HP | HP Color LaserJet CP4005 |
| HP | HP Deskjet 1280 |
| HP | HP PhotoSmart 7345 |
| HP | HP OfficeJet G95 |
| HP | HP Deskjet d2400 Series |



| | |
|----|-------------------------------------|
| HP | HP OfficeJet 520 |
| HP | HP LaserJet 4240 |
| HP | HP Deskjet 950c |
| HP | HP PaintJet XL300 |
| HP | HP Designjet Z6200ps 42in Photo |
| HP | HP PhotoSmart 7350 |
| HP | HP Color LaserJet 3500 |
| HP | HP LaserJet 4250 |
| HP | HP PSC 1300 Series |
| HP | HP Deskjet 540 |
| HP | HP DeskJet 895C |
| HP | HP Photosmart Pro b8300 Series |
| HP | HP Photosmart Prem c410 Series |
| HP | HP Photosmart c6300 Series |
| HP | HP Deskjet 952c |
| HP | HP Officejet Pro 8500 a910 |
| HP | HP LaserJet 8150 |
| HP | HP Officejet 4255 |
| HP | HP Officejet 5100 Series |
| HP | HP Deskjet 5650 |
| HP | HP Deskjet 5652 |
| HP | HP Color LaserJet cp4005 |
| HP | HP Color LaserJet CM2320 MFP Series |
| HP | HP Photosmart Premium c309g-m |
| HP | HP Photosmart 7600 Series |
| HP | HP LaserJet 1320 series |
| HP | HP DesignJet 650C |
| HP | HP Officejet Pro I7400 |
| HP | HP DeskJet 1000C |
| HP | HP LaserJet m3035 MFP |
| HP | HP LaserJet 5000 Series |
| HP | HP DesignJet 30 |
| HP | HP DeskJet 500C |
| HP | HP Photosmart 140 Series |
| HP | HP Photosmart a520 Series |
| HP | HP Photosmart Pro b8800 Series |
| HP | HP LaserJet m1538dnf MFP |
| HP | HP OfficeJet 570 |
| HP | HP LaserJet 2300 Series |
| HP | HP Deskjet 955c |
| HP | HP LaserJet 2100 |
| HP | HP Designjet 4520ps |
| HP | HP Officejet 5600 Series |

| | |
|----|--------------------------------|
| HP | HP DeskJet 680C |
| HP | HP Officejet 7000 e809a Series |
| HP | HP Color LaserJet 3550 |
| HP | HP OfficeJet 580 |
| HP | HP LaserJet 3200se |
| HP | HP Photosmart 100 |
| HP | HP LaserJet cp1027nw |
| HP | HP LaserJet CM1410 Series |
| HP | HP LaserJet p2015n Series |
| HP | HP LaserJet m1120 MFP |
| HP | HP Officejet j5700 Series |
| HP | HP Deskjet 870c |
| HP | HP LaserJet p1005 |
| HP | HP LaserJet p1006 |
| HP | HP LaserJet p1007 |
| HP | HP OfficeJet 590 |
| HP | HP LaserJet p1008 |
| HP | HP LaserJet p1009 |
| HP | HP Photosmart a440 Series |
| HP | HP Deskjet f4200 Series |
| HP | HP Deskjet 957c |
| HP | HP Designjet T1200 PostScript |
| HP | HP Photosmart c4100 Series |
| HP | HP Deskjet 3500 |
| HP | HP Deskjet 825c |
| HP | HP DeskJet 682C |
| HP | HP Color LaserJet 2700 |
| HP | HP LaserJet p2055d |
| HP | HP Officejet Pro k850 |
| HP | HP Photosmart d6100 Series |
| HP | HP Business Inkjet 2600 PS |
| HP | HP LaserJet 6MP |
| HP | HP PhotoSmart P1315 |
| HP | HP OfficeJet V40 |
| HP | HP LaserJet p2055x |
| HP | HP DesignJet 70 |
| HP | HP DesignJet 750C Plus |
| HP | HP LaserJet 8150 MFP |
| HP | HP Color LaserJet Series PCL 6 |
| HP | HP Photosmart 8100 Series |
| HP | HP Photosmart 2700 Series |
| HP | HP DeskJet 550C |
| HP | HP Color LaserJet |



| | |
|----|------------------------------|
| HP | HP Deskjet 959c |
| HP | HP Officejet Series 300 |
| HP | HP Photosmart 130 |
| HP | HP Photosmart c4600 Series |
| HP | HP PSC 2300 Series |
| HP | HP PSC 950vr |
| HP | HP Color LaserJet CM4730 MFP |
| HP | HP DeskJet 940C |
| HP | HP Officejet Series 310 |
| HP | HP LaserJet Series PCL 6 |
| HP | HP DesignJet 90 |
| HP | HP Officejet 6100 Series |
| HP | HP Officejet Series 320 |
| HP | HP LaserJet m5025 MFP |
| HP | HP DeskJet 420C |
| HP | HP LaserJet p1505 |
| HP | HP Deskjet 2050 j510 Series |
| HP | HP Photosmart b8500 Series |
| HP | HP Deskjet 610c |
| HP | HP LaserJet 9040 |
| HP | HP LaserJet 1320nw |
| HP | HP PSC 950xi |
| HP | HP LaserJet 1300 |
| HP | HP Officejet Series 330 |
| HP | HP Officejet 100 Mobile I411 |
| HP | HP DeskJet 610CL |
| HP | HP Business Inkjet 2300 |
| HP | HP Deskjet 3550 |
| HP | HP Officejet D Series |
| HP | HP DeskJet 810C |
| HP | HP LaserJet p4015tn |
| HP | HP LaserJet 3300 Series |
| HP | HP Deskjet 6120 |
| HP | HP Officejet j3500 Series |
| HP | HP Deskjet 6122 |
| HP | HP Color LaserJet cm6040 MFP |
| HP | HP Deskjet 6127 |
| HP | LaserJet |
| HP | HP LaserJet 5200 |
| HP | HP LaserJet M4345 MFP |
| HP | HP DeskJet 5550 |
| HP | HP DeskJet 5551 |
| HP | HP Deskjet 612c |

| | |
|----|-------------------------------------|
| HP | HP LaserJet M9059 MFP |
| HP | HP LaserJet 9000 MFP |
| HP | HP LaserJet 1320 |
| HP | HP Color LaserJet CM1312 MFP Series |
| HP | HP Officejet Series 350 |
| HP | HP Photosmart 3200 Series |
| HP | HP DeskJet 990C |
| HP | HP DeskJet 812C |
| HP | HP Officejet 4000 k210 |
| HP | HP Business Inkjet 1000 |
| HP | HP LaserJet 3310 MFP |
| HP | HP Photosmart c5100 Series |
| HP | HP Color Inkjet cp1700 |
| HP | HP Deskjet 6600 |
| HP | HP DeskJet 500 |
| HP | HP LaserJet 4ml |
| HP | HP LaserJet 4mp |
| HP | HP LaserJet Professional p1566 |
| HP | HP Photosmart d7100 Series |
| HP | HP Photosmart 330 Series |
| HP | HP DeskJet 510 |
| HP | HP Photosmart a710 Series |
| HP | HP OfficeJet 5110xi |
| HP | HP Designjet T790ps 24in |
| HP | HP Business Inkjet 2800 |
| HP | HP LaserJet Plus |
| HP | HP Mopier 320 |
| HP | HP LaserJet 9040 9050 MFP |
| HP | HP LaserJet M2727 MFP Series |
| HP | HP PSC 1358 Series |
| HP | HP DeskJet 520 |
| HP | HP Officejet Pro 8500 a909a |
| HP | HP DeskJet 815C |
| HP | HP Officejet Pro 8500 a909g |
| HP | HP LaserJet 9055 MFP |
| HP | HP LaserJet cm1415fnw |
| HP | HP Officejet Pro 8500 a909n |
| HP | HP LaserJet 1320tn |
| HP | HP Color LaserJet 2800 Series |
| HP | HP DeskJet 948C |
| HP | HP DeskJet 340C |
| HP | HP Printer Scanner Copier 300 |
| HP | HP LaserJet 5200lx |

| | |
|----|----------------------------------|
| HP | HP DeskJet 816C |
| HP | HP Officejet 7100 Series |
| HP | HP LaserJet 8100 MFP |
| HP | HP Deskjet 1200c |
| HP | HP Photosmart a630 Series |
| HP | HP Color LaserJet 4500 |
| HP | HP DesignJet 100plus |
| HP | HP Officejet g85xi |
| HP | HP DeskJet 540 |
| HP | HP Officejet Pro k5300 |
| HP | HP DeskJet 995C |
| HP | HP Photosmart 7550 |
| HP | HP Deskjet 920c |
| HP | HP Officejet j4500 Series |
| HP | HP DesignJet 800 |
| HP | HP Deskjet 1600cm |
| HP | HP Deskjet 1600cn |
| HP | HP DesignJet 750C |
| HP | HP Deskjet 400l |
| HP | HP LaserJet 4300 Series |
| HP | HP LaserJet P2055 Series |
| HP | HP LaserJet 4si |
| HP | HP DeskJet 670TV |
| HP | HP LaserJet Professional p1606dn |
| HP | HP LaserJet 2100M |
| HP | HP DeskJet 600C |
| HP | HP LaserJet 3020 3030 |
| HP | HP LaserJet 5200L |
| HP | HP DeskJet 1100C |
| HP | HP Deskjet 5800 |
| HP | HP LaserJet 5200l |
| HP | HP PSC 370 |
| HP | HP OfficeJet 700 |
| HP | HP Photosmart 5510 Series |
| HP | HP Deskjet 610cl |
| HP | HP LaserJet 1220se |
| HP | HP LaserJet 3100 |
| HP | HP Officejet 7500 e910 |
| HP | HP Photosmart c6100 Series |
| HP | HP Deskjet f735 |
| HP | HP PSC 380 |
| HP | HP PSC 1100 Series |
| HP | HP OfficeJet 710 |



| | |
|----|---------------------------------|
| HP | HP Deskjet Ink Adv 2010 k010 |
| HP | HP PSC 750xi |
| HP | HP Color LaserJet 4550 |
| HP | HP Photosmart d5400 Series |
| HP | HP LaserJet cm1413fn |
| HP | HP designjet 5500ps |
| HP | HP Color LaserJet cm2320fxi MFP |
| HP | HP LaserJet m1005 |
| HP | HP PhotoSmart 7550 |
| HP | HP OfficeJet 720 |
| HP | HP OfficeJet 725 |
| HP | HP Deskjet 970c |
| HP | HP Photosmart 7400 Series |
| HP | HP LaserJet 8150 Series |
| HP | HP Color LaserJet 5M |
| HP | HP Color LaserJet 3700 |
| HP | HP OfficeJet 5105 |
| HP | HP Color LaserJet 5m |
| HP | HP DesignJet 2500CP |
| HP | HP LaserJet M3035 MFP |
| HP | HP LaserJet p2014 |
| HP | HP PSC 1600 Series |
| HP | HP Photosmart a320 Series |
| HP | HP LaserJet m1522nf MFP |
| HP | HP LaserJet 2100 Series |
| HP | HP OfficeJet 5110 |
| HP | HP Business Inkjet 2800 PS |
| HP | HP LaserJet 1100A |
| HP | HP Deskjet 5850 |
| HP | HP PhotoSmart P1000 |
| HP | HP LaserJet 1100a |
| HP | HP Deskjet 840c |
| HP | HP LaserJet p2035 |
| HP | HP Officejet Pro k550 |
| HP | HP LaserJet 3150 |
| HP | HP Officejet |
| HP | HP Deskjet 841c |
| HP | HP Photosmart 7900 Series |
| HP | HP Designjet T1100ps 24in |
| HP | HP Officejet Pro l7600 |
| HP | HP PSC 900 Series |
| HP | HP LaserJet 8000 Series |
| HP | HP Officejet g55 |

| | |
|----|---------------------------------------|
| HP | HP PhotoSmart P230 |
| HP | HP Officejet j5500 Series |
| HP | HP Deskjet 842c |
| HP | HP Photosmart a820 Series |
| HP | HP Deskjet 2000 j210 Series |
| HP | HP Officejet T Series |
| HP | HP PSC 2170 Series |
| HP | HP Deskjet 975c |
| HP | HP Photosmart 2570 Series |
| HP | HP LaserJet p2055 |
| HP | HP LaserJet 2300 |
| HP | HP Color LaserJet cp1518ni |
| HP | HP DesignJet 455CA |
| HP | HP Deskjet 843c |
| HP | HP Photosmart 6510 Series |
| HP | HP Officejet 4115 Series |
| HP | HP LaserJet 9065mfp |
| HP | HP LaserJet 2D |
| HP | HP LaserJet p2015x Series |
| HP | HP Deskjet 670tv |
| HP | HP LaserJet 2P |
| HP | HP LaserJet p2015dn Series |
| HP | HP PSC 2100 Series |
| HP | HP Deskjet 890c |
| HP | HP 2500CM |
| HP | HP Deskjet f4500 Series |
| HP | HP Officejet g85 |
| HP | HP Photosmart c7100 Series |
| HP | HP Photosmart c4400 Series |
| HP | HP LaserJet 3D |
| HP | HP Color LaserJet 2605dn |
| HP | HP Deskjet 845c |
| HP | HP LaserJet 1000 |
| HP | HP Color LaserJet 5000 |
| HP | HP e-printer e20 |
| HP | HP DeskJet Plus |
| HP | HP Officejet g95 |
| HP | HP LaserJet Professional m1214nfh MFP |
| HP | HP LaserJet M5025 MFP |
| HP | HP LaserJet 3330 MFP |
| HP | HP LaserJet 4L |
| HP | HP LaserJet 4M |
| HP | HP LaserJet 4P |

| | |
|----|-------------------------------|
| HP | HP Officejet j4680 Series |
| HP | HP Deskjet Ink Advant k209a-z |
| HP | HP LaserJet 4V |
| HP | HP LaserJet 1010 |
| HP | HP LaserJet 1012 |
| HP | HP LaserJet 4V/4LJ Pro |
| HP | HP LaserJet 3200m |
| HP | HP LaserJet 1015 |
| HP | HP LaserJet 1018 |
| HP | HP LaserJet 4l |
| HP | HP Photosmart 8400 Series |
| HP | HP LaserJet 4v |
| HP | HP Officejet Series 500 |
| HP | HP LaserJet 5L |
| HP | HP LaserJet 5M |
| HP | HP LaserJet 5P |
| HP | HP LaserJet 1020 |
| HP | HP LaserJet 1022 |
| HP | HP LaserJet 5l |
| HP | HP LaserJet 5p |
| HP | HP LaserJet cm1416fnw |
| HP | HP Officejet 9100 Series |
| HP | HP Color LaserJet 1600 |
| HP | HP DeskJet 960C |
| HP | HP Designjet 4020ps |
| HP | HP LaserJet 6L |
| HP | HP LaserJet 6P |
| HP | HP Officejet h470 |
| HP | HP Color LaserJet 8550GN |
| HP | HP LaserJet 6l |
| HP | HP LaserJet 6p |
| HP | HP Color LaserJet CP6015 |
| HP | HP DesignJet 3500CP PS3 |
| HP | HP DeskJet 200 |
| HP | HP Officejet Series 520 |
| HP | HP OfficeJet LX |
| HP | HP Deskjet 3740 |
| HP | HP LaserJet 1022n |
| HP | HP LaserJet p4515n |
| HP | HP LaserJet p4515x |
| HP | HP Deskjet 630c |
| HP | HP DeskJet 916C |
| HP | HP Business Inkjet 2300 PS |



| | |
|----|------------------------------|
| HP | HP Deskjet 895c |
| HP | HP LaserJet 500 color M551 |
| HP | HP LaserJet 5si Mopier |
| HP | HP Color LaserJet 5500 |
| HP | HP Deskjet 1100 |
| HP | HP DeskJet 830C |
| HP | HP LaserJet 9055mfp |
| HP | HP LaserJet 9000 Series |
| HP | HP LaserJet m1120n MFP |
| HP | HP Photosmart a510 Series |
| HP | HP LaserJet P2015 Series |
| HP | HP DeskJet |
| HP | HP Business Inkjet 2280 PS |
| HP | HP Deskjet 632c |
| HP | HP DesignJet 5000PS |
| HP | HP Color LaserJet cp6015 |
| HP | HP Deskjet d4200 Series |
| HP | HP Deskjet d1500 Series |
| HP | HP Deskjet 500c |
| HP | HP Deskjet 1120 |
| HP | HP Deskjet 1125 |
| HP | HP Photosmart 7510 Series |
| HP | HP Color LaserJet cp2025dn |
| HP | HP DeskJet 832C |
| HP | HP Business Inkjet 1200 |
| HP | HP Photosmart c8100 Series |
| HP | HP DeskJet 1200C |
| HP | HP Officejet v30 |
| HP | HP Deskjet 6800 |
| HP | HP Photosmart d7400 Series |
| HP | HP LaserJet 6mp |
| HP | HP Photosmart a430 Series |
| HP | HP PSC 500 |
| HP | HP Color LaserJet CM6040 MFP |
| HP | HP Officejet Series 570 |
| HP | HP LaserJet m3027 MFP |
| HP | HP Officejet 4200 Series |
| HP | HP Officejet v40 |
| HP | HP DesignJet 500 |
| HP | HP Officejet v45 |
| HP | HP LaserJet 4100 |
| HP | HP DeskJet 880C |
| HP | HP PSC 2210 |

| | |
|----|--|
| HP | HP LaserJet p4014dn |
| HP | HP Officejet 4500 g510g-m |
| HP | HP Designjet Z6100ps 60in Photo |
| HP | HP Color LaserJet 5550 |
| HP | HP Officejet Series 580 |
| HP | HP Color LaserJet 4550 |
| HP | HP DesignJet 800PS |
| HP | HP LaserJet 1005 Series |
| HP | HP LaserJet 2 |
| HP | HP LaserJet 3 |
| HP | HP LaserJet 4 |
| HP | HP LaserJet 5 |
| HP | HP LaserJet 6 |
| HP | HP DesignJet 5500ps |
| HP | HP LaserJet 8000 |
| HP | HP Officejet 4105 |
| HP | HP Designjet T7100ps Monochrome |
| HP | HP LaserJet m1539dnf MFP |
| HP | HP Deskjet 400 |
| HP | HP LaserJet 4100 Series |
| HP | HP Photosmart b109a-m |
| HP | HP Officejet Series 590 |
| HP | HP LaserJet p3004 |
| HP | HP LaserJet p3005 |
| HP | HP Deskjet 550c |
| HP | HP Photosmart b010 Series |
| HP | HP Officejet 7400 Series |
| HP | HP Deskjet 1220c |
| HP | HP DeskJet 882C |
| HP | HP Color LaserJet 4700 |
| HP | HP LaserJet m9050 MFP |
| HP | HP OfficeJet 6105 |
| HP | HP Designjet T2300 PostScript |
| HP | HP Deskjet 505j |
| HP | HP Photosmart 1215 |
| HP | HP Photosmart 1218 |
| HP | HP Officejet Pro 8000 Enterprise A811a |
| HP | HP Designjet Z6200ps 60in Photo |
| HP | HP OfficeJet 6110 |
| HP | HP Color LaserJet 3500n |
| HP | HP LaserJet 1320 Series |
| HP | HP PSC 2210 Series |
| HP | HP Deskjet 940c |

| | |
|----|---------------------------------|
| HP | HP LaserJet 1200n |
| HP | HP LaserJet m1536dnf MFP |
| HP | HP Designjet T770 PostScript |
| HP | HP Photosmart 470 Series |
| HP | HP LaserJet p3010 Series |
| HP | HP LaserJet 9050 MFP |
| HP | HP Deskjet d2500 Series |
| HP | HP OfficeJet K60 |
| HP | HP Color LaserJet cp5225 |
| HP | HP DeskJet 1120C |
| HP | HP LaserJet 3P w/PS |
| HP | HP DesignJet 250C |
| HP | HP Deskjet 5550 |
| HP | HP Deskjet 5551 |
| HP | HP Deskjet 5552 |
| HP | HP Photosmart 7200 Series |
| HP | HP Deskjet 810c |
| HP | HP OfficeJet K60xi |
| HP | HP OfficeJet K80 |
| HP | HP PSC 1400 Series |
| HP | HP OfficeJet Pro 1150C |
| HP | HP Deskjet 460 |
| HP | HP LaserJet cm1415fn |
| HP | HP Officejet Pro I7300 |
| HP | HP Color LaserJet 3550n |
| HP | HP LaserJet p2055dn |
| HP | HP Photosmart 320 Series |
| HP | HP 2500C |
| HP | HP Deskjet 812c |
| HP | HP Deskjet 990c |
| HP | HP LaserJet 1160 Series |
| HP | HP Photosmart 7700 Series |
| HP | HP 2500c |
| HP | HP LaserJet Professional p1102w |
| HP | HP Business Inkjet 3000 |
| HP | HP DeskJet 670C |
| HP | HP LaserJet 3330 |
| HP | HP Photosmart a620 Series |
| HP | HP Color LaserJet cm4540 MFP |
| HP | HP LaserJet 5100 Series |
| HP | HP LaserJet |
| HP | HP DeskJet 1125C |
| HP | HP LaserJet 6P/6MP |



| | |
|----|--------------------------------|
| HP | HP Photosmart 240 Series |
| HP | HP Photosmart Wireless b109n-z |
| HP | HP Officejet Pro k8600 |
| HP | HP Deskjet 815c |
| HP | HP LaserJet cm1417fnw |
| HP | HP Designjet T790ps 44in |
| HP | HP DeskJet 672C |
| HP | HP Color LaserJet 2605 |
| HP | HP LaserJet 5MP |
| HP | HP PhotoSmart P1215 |
| HP | HP PhotoSmart P1218 |
| HP | HP Deskjet 948c |
| HP | HP Photosmart c4200 Series |
| HP | HP LaserJet 2 w/PS |
| HP | HP Deskjet 816c |
| HP | HP LaserJet cp1021 |
| HP | HP LaserJet cp1022 |
| HP | HP LaserJet cp1023 |
| HP | HP LaserJet cp1025 |
| HP | HP DeskJet 540C |
| HP | HP LaserJet 1022nw |
| HP | HP Deskjet 3420 |
| HP | HP Deskjet 3425 |
| HP | HP Deskjet 995c |
| HP | HP Color LaserJet 9500 MFP |
| HP | HP DesignJet 1050C |
| HP | HP DeskJet 9300 |
| HP | HP Photosmart 8200 Series |
| HP | HP DeskJet 930C |
| HP | HP LaserJet m5039 MFP |
| HP | HP Photosmart Plus b210 Series |
| HP | HP LaserJet 3300 3310 3320 |
| HP | HP Business Inkjet 2250 PS |
| HP | HP LaserJet 3380 |
| HP | HP LaserJet 9000 MFP |
| HP | HP cp1160 |
| HP | HP PSC 2400 Series |
| HP | HP Color LaserJet 4600 Series |
| HP | HP Photosmart c4700 Series |
| HP | HP Deskjet 3900 |
| HP | HP LaserJet 3390 |
| HP | HP LaserJet 3392 |
| HP | HP LaserJet 1200 |

| | |
|----|---------------------------------------|
| HP | HP LaserJet Professional m1217nfw MFP |
| HP | HP Officejet 6200 Series |
| HP | HP DeskJet 932C |
| HP | HP LaserJet 4100 Series |
| HP | HP Business Inkjet 2200 |
| HP | HP Deskjet 3450 |
| HP | HP Deskjet 3910 |
| HP | HP Color LaserJet 2550 Series |
| HP | HP DeskJet 933C |
| HP | HP LaserJet 5100 |
| HP | HP Photosmart 8700 Series |
| HP | HP Officejet Series 700 |
| HP | HP Deskjet f2100 Series |
| HP | HP Officejet 6500 e709a |
| HP | HP Deskjet 3920 |
| HP | HP Officejet 6500 e709n |
| HP | HP Officejet 7000 e809a |
| HP | HP LaserJet 1220 |
| HP | HP DeskJet 934C |
| HP | HP Officejet j3600 Series |
| HP | HP LaserJet 5Si |
| HP | HP Photosmart p1100 |
| HP | HP Deskjet 6980 Series |
| HP | HP LaserJet 5Si Mopier |
| HP | HP Photosmart a310 Series |
| HP | HP DeskJet 980C |
| HP | HP Officejet Series 710 |
| HP | HP Officejet 6500 e710n-z |
| HP | HP Deskjet d1300 Series |
| HP | HP DeskJet 935C |
| HP | HP LaserJet 9000 |
| HP | HP Officejet 5105 |
| HP | HP Deskjet 6500 |
| HP | HP DeskJet 400 |
| HP | HP Business Inkjet 2230 |
| HP | HP Officejet Series 720 |
| HP | HP Officejet Series 725 |
| HP | HP Deskjet 3940 |
| HP | HP Color LaserJet cm6030 MFP |
| HP | HP LaserJet p4014n |
| HP | HP Officejet 5110 |
| HP | HP Deskjet 3050 j610 Series |
| HP | HP Photosmart 3300 Series |

| | |
|----|---------------------------------|
| HP | HP LaserJet 4050 Series |
| HP | HP PSC 1510 Series |
| HP | HP LaserJet p4014 |
| HP | HP LaserJet p4015 |
| HP | HP DeskJet 850C |
| HP | HP Photosmart c5200 Series |
| HP | HP LaserJet p4015n |
| HP | HP LaserJet p4015x |
| HP | HP Color LaserJet cm3530 MFP |
| HP | HP LaserJet 1300n |
| HP | HP Business Inkjet 2250 |
| HP | HP Photosmart d7200 Series |
| HP | HP Color LaserJet cp2025n |
| HP | HP OfficeJet 7110 |
| HP | HP LaserJet M3027 MFP |
| HP | HP Color LaserJet cp2025x |
| HP | HP LaserJet 3300 MFP |
| HP | HP Officejet 5110v |
| HP | HP Color LaserJet cm1312nfi MFP |
| HP | HP LaserJet 4Si/4Si MX 600 dpi |
| HP | HP DesignJet 488CA |
| HP | HP Mopier 240 |
| HP | HP OfficeJet V40xi |
| HP | HP LaserJet 9040 |
| HP | HP DeskJet 720C |
| HP | HP DesignJet 230 |
| HP | HP Designjet T1100ps 44in |
| HP | HP DeskJet 1220C |
| HP | HP OfficeJet 7130 |
| HP | HP DesignJet 350C |
| HP | HP OfficeJet D125 |
| HP | HP DeskJet 2000 |
| HP | HP LaserJet 9050 |
| HP | HP DeskJet 450 |
| HP | HP Business Inkjet 2280 |
| HP | HP OfficeJet 7140 |
| HP | HP Business Inkjet 3000 PS |
| HP | HP Officejet 7200 Series |
| HP | HP DesignJet 700 |
| HP | HP OfficeJet D135 |
| HP | HP LaserJet 4300 |
| HP | HP Officejet r80xi |
| HP | HP Photosmart c4380 Series |



| | |
|----|---|
| HP | HP LaserJet p4515 |
| HP | HP LaserJet 9055 9065 MFP |
| HP | HP DeskJet 722C |
| HP | HP DeskJet 2500CM |
| HP | HP OfficeJet D145 |
| HP | HP CM8050 CM8060 Color MFP with Edgeline Technology |
| HP | HP DeskJet 855C |
| HP | HP PSC 720 |
| HP | HP Deskjet 656c |
| HP | HP Deskjet 5700 |
| HP | HP Deskjet 600 |
| HP | HP Color LaserJet cm2320n MFP |
| HP | HP DesignJet 1050C PS3 |
| HP | HP Color Inkjet Printer CP1700 |
| HP | HP OfficeJet D155 |
| HP | HP OfficeJet 600 |
| HP | HP DeskJet 3810 |
| HP | HP DeskJet 3816 |
| HP | HP Color LaserJet 2600n |
| HP | HP Deskjet d2300 Series |
| HP | HP OfficeJet 610 |
| HP | HP dj450 |
| HP | HP LaserJet cm1412fn |
| HP | HP Color LaserJet 4730 MFP |
| HP | HP Deskjet 9600 |
| HP | HP DeskJet 3820 |
| HP | HP DeskJet 3822 |
| HP | HP LaserJet 3015 |
| HP | HP DeskJet 2500 |
| HP | HP Photosmart c6200 Series |
| HP | HP PSC 1200 Series |
| HP | HP OfficeJet 625 |
| HP | HP Deskjet 960c |
| HP | HP PSC 750 |
| HP | HP LaserJet 3020 |
| HP | HP Photosmart Prem c310 Series |
| HP | HP LaserJet cm1418fnw |
| HP | HP Color Inkjet Printer cp1700 |
| HP | HP DesignJet 750 |
| HP | HP Color LaserJet 3600 |
| HP | HP OfficeJet 630 |
| HP | HP LaserJet 4350 |
| HP | HP OfficeJet 635 |

| | |
|----|---------------------------------|
| HP | HP Deskjet d5500 Series |
| HP | HP PSC 760 |
| HP | HP Officejet 4500 g510n-z |
| HP | HP DeskJet 640C |
| HP | HP PhotoSmart P100 |
| HP | HP LaserJet m1319f MFP |
| HP | HP LaserJet 3030 |
| HP | HP Officejet 6500 e710a-f |
| HP | HP Officejet k60xi |
| HP | HP Deskjet 916c |
| HP | HP LaserJet p2014n |
| HP | HP Deskjet 830c |
| HP | HP LaserJet 2200 Series |
| HP | HP Officejet 4400 k410 |
| HP | HP PSC 780 |
| HP | HP Photosmart Estn c510 Series |
| HP | HP OfficeJet Pro 1170C |
| HP | HP Deskjet 660 |
| HP | HP LaserJet 3050 |
| HP | HP LaserJet 3052 |
| HP | HP Officejet 5500 Series |
| HP | HP LaserJet 3055 |
| HP | HP OfficeJet R40 |
| HP | HP OfficeJet R45 |
| HP | HP Officejet Pro l7500 |
| HP | HP PaintJet XL |
| HP | HP PhotoSmart P130 |
| HP | HP Color LaserJet cm2320 MFP |
| HP | HP LaserJet 4 PostScript 600DPI |
| HP | HP Deskjet 670 |
| HP | HP 910 |
| HP | HP 915 |
| HP | HP Color LaserJet cm1312 MFP |
| HP | HP Deskjet 832c |
| HP | HP PSC 2350 Series |
| HP | HP Officejet 9100 series PS |
| HP | HP Deskjet f4100 Series |
| HP | HP LaserJet 2200 |
| HP | HP Deskjet 680 |
| HP | HP Deskjet 682 |
| HP | HP OfficeJet R60 |
| HP | HP OfficeJet R65 |
| HP | HP DeskJet 690C |

| | |
|----|--------------------------------|
| HP | HP LaserJet Professional p1102 |
| HP | HP 2000C |
| HP | HP Officejet 6150 Series |
| HP | HP 2000c |
| HP | HP LaserJet 8100 Series |
| HP | HP Deskjet 690 |
| HP | HP Deskjet 692 |
| HP | HP Deskjet 693 |
| HP | HP Deskjet 694 |
| HP | HP Color LaserJet cm6049 MFP |
| HP | HP Deskjet 6940 Series |
| HP | HP LaserJet cp1028nw |
| HP | HP Deskjet 695 |
| HP | HP Deskjet 697 |
| HP | HP LaserJet 4345 mfp |
| HP | HP Deskjet 880c |
| HP | HP PSC 780xi |
| HP | HP Envy 110 Series |
| HP | HP Designjet T1120ps 24in |
| HP | HP Deskjet 3600 |
| HP | HP Deskjet 1050 j410 Series |
| HP | HP DesignJet 1055CM PS3 |
| HP | HP OfficeJet R80 |
| HP | HP DeskJet 692C |
| HP | HP PSC 2200 Series |
| HP | HP Color LaserJet 2800 |
| HP | HP Photosmart 8000 Series |
| HP | HP Photosmart 2600 Series |
| HP | HP OfficeJet Pro 1175C |
| HP | HP Photosmart c7200 Series |
| HP | HP Photosmart c4500 Series |
| HP | HP LaserJet m5035 MFP |
| HP | HP Color LaserJet CM4540 MFP |
| HP | HP DeskJet 693C |
| HP | HP LaserJet 3320N MFP |
| HP | HP Deskjet 3000 j310 Series |
| HP | HP Deskjet 882c |
| HP | HP DeskJet 560C |
| HP | HP LaserJet M4555 MFP |
| HP | HP Officejet Pro 1150c |
| HP | HP Photosmart 230 |
| HP | HP DeskJet 648C |
| HP | HP Color LaserJet CM1015 |

| | |
|-----|---------------------------------|
| HP | HP Officejet k60 |
| HP | HP DeskJet 694C |
| HP | HP LaserJet 5Si Mopier PS |
| HP | HP DeskJet 950C |
| HP | HP Color LaserJet cp5225n |
| HP | HP Color LaserJet 3700n |
| HP | HP Photosmart Ink Adv k510 |
| HP | HP Photosmart Prem-web c309n-s |
| HP | HP DeskJet 695C |
| HP | HP LaserJet 3320 MFP |
| HP | HP Officejet g55xi |
| HP | HP Color LaserJet CP2020 Series |
| HP | HP Deskjet Ink Advant k109a-z |
| HP | HP Photosmart 380 Series |
| HP | HP Officejet k80 |
| HP | HP LaserJet 9050 |
| HP | HP DesignJet 1055CM |
| HP | HP DeskJet 952C |
| HP | HP Color LaserJet cp4020 Series |
| HP | HP Deskjet 5400 Series |
| HP | HP Deskjet 3650 |
| HP | HP DeskJet 820C |
| HP | HP Officejet 4500 g510a-f |
| HP | HP DeskJet 697C |
| HP | HP DesignJet ColorPro CAD |
| HP | HP DesignJet 450C |
| IBM | IBM Infoprint 1585n |
| IBM | IBM 4019 |
| IBM | IBM Infoprint 1650 MFP |
| IBM | IBM Infoprint 12 |
| IBM | IBM Infoprint 1572 MFP |
| IBM | IBM 4303 Network Color Printer |
| IBM | IBM Infoprint 1570 MFP |
| IBM | IBM 3853 JetPrinter |
| IBM | IBM Infoprint 1226tn |
| IBM | IBM Infoprint 1540 MFP |
| IBM | IBM 4029 10P |
| IBM | IBM Infoprint 1422 |
| IBM | IBM Infoprint 1560 MFP |
| IBM | IBM Execjet 4072 |
| IBM | IBM Infoprint 1580 MFP |
| IBM | IBM 4029 030 LaserPrinter 10 |
| IBM | IBM Infoprint 1532 Express |

| | |
|------------|----------------------------|
| IBM | IBM Page Printer 3112 |
| IBM | IBM 4312 |
| IBM | IBM ProPrinterII |
| Imagen | Imagen ImPress |
| Imagistics | Imagistics im8530Series PS |
| Imagistics | Imagistics im8530 |
| InfoPrint | InfoPrint Pro 1107EX |
| InfoPrint | InfoPrint Pro 907EX |
| InfoPrint | InfoPrint Pro 1357EX |
| Infotec | Infotec IS2022 |
| Infotec | Infotec IS2027 |
| Infotec | Infotec IS 2018D |
| Infotec | Infotec IS2032 |
| Infotec | Infotec IS2035 |
| Infotec | Infotec IS 2316 |
| Infotec | Infotec IS 2320 |
| Infotec | Infotec IS2045 |
| Infotec | Infotec IS 2325 |
| Infotec | Infotec MP 6000 |
| Infotec | Infotec MP 6001 |
| Infotec | Infotec MP C3300 |
| Infotec | Infotec IS2090 |
| Infotec | Infotec MP 3350B |
| Infotec | Infotec IS 2015 |
| Infotec | Infotec IS 2018 |
| Infotec | Infotec ISC 1032c |
| Infotec | Infotec MP C2050 |
| Infotec | Infotec Pro 1357EX |
| Infotec | Infotec Pro 907EX |
| Infotec | Infotec IS 2060 |
| Infotec | Infotec IS 2075 |
| Infotec | Infotec MP C2550 |
| Infotec | Infotec IPC 3030DN |
| Infotec | Infotec MP 7000 |
| Infotec | Infotec MP 7001 |
| Infotec | Infotec IS 2015 |
| Infotec | Infotec IS 2018 |
| Infotec | Infotec 4353 MF |
| Infotec | Infotec ISC1032 |
| Infotec | Infotec IS2105 |
| Infotec | Infotec IPC 2525DN |
| Infotec | Infotec IS 2060 |
| Infotec | Infotec IS 2075 |

| | |
|---------|--------------------|
| Infotec | Infotec ISC 2835 |
| Infotec | Infotec ISC 2838 |
| Infotec | Infotec 4353 MF |
| Infotec | Infotec IPC 2525e |
| Infotec | Infotec IS 2220D |
| Infotec | Infotec IS 2215 |
| Infotec | Infotec IS 2216 |
| Infotec | Infotec MP 2851 |
| Infotec | Infotec IS 2220 |
| Infotec | Infotec IS 2225 |
| Infotec | Infotec IS 3090 |
| Infotec | Infotec IS 2230 |
| Infotec | Infotec IS 2235 |
| Infotec | Infotec IS 2245 |
| Infotec | Infotec MP 8000 |
| Infotec | Infotec MP 8001 |
| Infotec | Infotec IS 2255 |
| Infotec | Infotec IS 2265 |
| Infotec | Infotec IS 2275 |
| Infotec | Infotec ISC 2028 |
| Infotec | Infotec MP C4000 |
| Infotec | Infotec IS 2215 |
| Infotec | Infotec IS 2216 |
| Infotec | Infotec IS 2220 |
| Infotec | Infotec IS 2225 |
| Infotec | Infotec IS 3090 |
| Infotec | Infotec IS 2230 |
| Infotec | Infotec IS 2235 |
| Infotec | Infotec MP 3350 |
| Infotec | Infotec MP 3351 |
| Infotec | Infotec ISC 2525 |
| Infotec | Infotec IS 2245 |
| Infotec | Infotec IS 2255 |
| Infotec | Infotec IPC 2525 |
| Infotec | Infotec MP 2550B |
| Infotec | Infotec IS 2265 |
| Infotec | Infotec IS 2018D |
| Infotec | Infotec Pro 1107EX |
| Infotec | Infotec IS 2275 |
| Infotec | Infotec IPC1036 |
| Infotec | Infotec IPC2838 |
| Infotec | Infotec MP 5000B |
| Infotec | Infotec MP 9001 |

| | |
|---------|--------------------|
| Infotec | Infotec MP 2550 |
| Infotec | Infotec ISC824 |
| Infotec | Infotec Pro 1356EX |
| Infotec | Infotec Pro 906EX |
| Infotec | Infotec MP 4000B |
| Infotec | Infotec IS 2416 |
| Infotec | Infotec ISC 1024c |
| Infotec | Infotec IS 2425 |
| Infotec | Infotec IS 2430 |
| Infotec | Infotec MP C5000 |
| Infotec | Infotec IS 2435 |
| Infotec | Infotec IS 2445 |
| Infotec | Infotec ISC 3030 |
| Infotec | Infotec IS2105 |
| Infotec | Infotec ISC 3535 |
| Infotec | Infotec ISC 3545 |
| Infotec | Infotec IPC 3535 |
| Infotec | Infotec 4452 MF |
| Infotec | Infotec IS2022 |
| Infotec | Infotec IS2027 |
| Infotec | Infotec IS 2416 |
| Infotec | Infotec IS2032 |
| Infotec | Infotec IS2035 |
| Infotec | Infotec IS 2425 |
| Infotec | Infotec IP 280 |
| Infotec | Infotec IS2045 |
| Infotec | Infotec IS 2430 |
| Infotec | Infotec IS 2435 |
| Infotec | Infotec ISC 615G |
| Infotec | Infotec IS 2445 |
| Infotec | Infotec IS2090 |
| Infotec | Infotec 4452 MF |
| Infotec | Infotec MP C6000 |
| Infotec | Infotec 4651 MF |
| Infotec | Infotec IS 2122 |
| Infotec | Infotec IS 2127 |
| Infotec | Infotec ISC 4045 |
| Infotec | Infotec MP 4000 |
| Infotec | Infotec MP 4001 |
| Infotec | Infotec IS 2132 |
| Infotec | Infotec IS 2135 |
| Infotec | Infotec IS 2145 |
| Infotec | Infotec IS 2151 |

| | |
|----------------|-----------------------------------|
| Infotec | Infotec MP C6501 |
| Infotec | Infotec IS 2160 |
| Infotec | Infotec IS 2175 |
| Infotec | Infotec ISC 4560 |
| Infotec | Infotec IS 2122 |
| Infotec | Infotec IS 2127 |
| Infotec | Infotec IS 2132 |
| Infotec | Infotec IS 2135 |
| Infotec | Infotec ISC 2428 |
| Infotec | Infotec IS 2145 |
| Infotec | Infotec ISC 2432 |
| Infotec | Infotec IS 2151 |
| Infotec | Infotec IS 2160 |
| Infotec | Infotec Pro 1106EX |
| Infotec | Infotec IS 2175 |
| Infotec | Infotec IS 2220D |
| Infotec | Infotec IS 3110 |
| Infotec | Infotec MP 5000 |
| Infotec | Infotec MP 5001 |
| Infotec | Infotec IS 3135 |
| Infotec | Infotec MP C7500 |
| Infotec | Infotec MP C7501 |
| Infotec | Infotec IPC 4040DN |
| Infotec | Infotec IS 2316 |
| Infotec | Infotec ISC 5560 |
| Infotec | Infotec IS 2320 |
| Infotec | Infotec IS 2325 |
| Infotec | Infotec MP C2800 |
| Infotec | Infotec IS 3110 |
| Infotec | Infotec MP 171 |
| Infotec | Infotec IS 3135 |
| Kodak | Kodak Photo-Printer-500 |
| Kodak | Kodak Photo-Printer |
| Kodak | Kodak PD-4000 |
| Kodak | Kodak EasyShare-G600-Printer-Dock |
| Kodak | Kodak DigiSource 9110 |
| Kodak | Kodak Printer-Dock-Plus-S3 |
| Kodak | Kodak PD-6000 |
| Kodak | Kodak IS 70 CPII |
| Kodak | Kodak Printer-Dock-Plus |
| Kodak | Kodak Easyshare-Printer-Dock |
| KONICA MINOLTA | KONICA MINOLTA 1050 PS/P |
| KONICA MINOLTA | KONICA MINOLTA C450 PS/P |

| | |
|----------------|---------------------------------|
| KONICA MINOLTA | KONICA MINOLTA C352/C300 PS/P |
| KONICA MINOLTA | KONICA MINOLTA bizhub C450 |
| KONICA MINOLTA | KONICA MINOLTA C351 PS/P |
| KONICA MINOLTA | KONICA MINOLTA C550 PS/P |
| KONICA MINOLTA | KONICA MINOLTA C250 PS/P |
| KONICA MINOLTA | KONICA MINOLTA 750/600 PS/P |
| KONICA MINOLTA | KONICA MINOLTA C252 PS/P |
| KONICA MINOLTA | KONICA MINOLTA 500/420/360 PS/P |
| KONICA MINOLTA | KONICA MINOLTA C451 PS/P |
| Kyocera | Kyocera KM-2050 |
| Kyocera | Kyocera FS-9530DN |
| Kyocera | Kyocera CS-1650 |
| Kyocera | Kyocera FS-C5030N |
| Kyocera | Kyocera KM-2530 |
| Kyocera | Kyocera TASKalfa 400ci KPD |
| Kyocera | Kyocera KM-2550 |
| Kyocera | Kyocera F-800T |
| Kyocera | Kyocera FS-C5100DN KPD |
| Kyocera | Kyocera FS-9120DN |
| Kyocera | Kyocera FS-3400 |
| Kyocera | Kyocera FS-600 |
| Kyocera | Kyocera CS-C4035E KPD |
| Kyocera | Kyocera F-800 |
| Kyocera | Kyocera FS-3820N |
| Kyocera | Kyocera KM-C2525E KPD |
| Kyocera | Kyocera F-3300 |
| Kyocera | Kyocera F-820 |
| Kyocera | Kyocera F-2200S |
| Kyocera | Kyocera CS-C3232E KPD |
| Kyocera | Kyocera CS 500ci KPD |
| Kyocera | Kyocera KM-3050 KPD |
| Kyocera | Kyocera F-2000 |
| Kyocera | Kyocera FS-6020 |
| Kyocera | Kyocera FS-6026 |
| Kyocera | Kyocera FS-C8008N |
| Kyocera | Kyocera F-2010 |
| Kyocera | Kyocera FS-6950DN KPD |
| Kyocera | Kyocera KM-3035 |
| Kyocera | Kyocera FS-6500 |
| Kyocera | Kyocera FS-680 |
| Kyocera | Kyocera KM-3050 |
| Kyocera | Kyocera KM-C3225 |
| Kyocera | Kyocera F-1200S |

| | |
|---------|-------------------------|
| Kyocera | Kyocera KM-C3232 |
| Kyocera | Kyocera F-1200 |
| Kyocera | Kyocera KM-3530 |
| Kyocera | Kyocera FS-1800 |
| Kyocera | Kyocera FS-1018MFP |
| Kyocera | Kyocera CS-1815 |
| Kyocera | Kyocera FS-9130DN |
| Kyocera | Kyocera FS-3400+ |
| Kyocera | Kyocera FS-7000 |
| Kyocera | Kyocera FS-6500+ |
| Kyocera | Kyocera FS-C5015N KPDL |
| Kyocera | Kyocera KM-6030 KPDL |
| Kyocera | Kyocera FS-C8100DN KPDL |
| Kyocera | Kyocera FS-C5400DN KPDL |
| Kyocera | Kyocera F-3000 |
| Kyocera | Kyocera FS-600 KPDL-2 |
| Kyocera | Kyocera FS-3600 |
| Kyocera | Kyocera F-3010 |
| Kyocera | Kyocera FS-800 |
| Kyocera | Kyocera FS-9530DN KPDL |
| Kyocera | Kyocera KM-4030 |
| Kyocera | Kyocera KM-4035 |
| Kyocera | Kyocera CS 300ci KPDL |
| Kyocera | Kyocera KM-4050 |
| Kyocera | Kyocera FS-C8026N |
| Kyocera | Kyocera FS-1000 |
| Kyocera | Kyocera FS-1010 |
| Kyocera | Kyocera F-2200 |
| Kyocera | Kyocera KM-4530 |
| Kyocera | Kyocera FS-850 |
| Kyocera | Kyocera FS-3900DN KPDL |
| Kyocera | Kyocera KM-C3225E KPDL |
| Kyocera | Kyocera FS-6700 |
| Kyocera | Kyocera FS-1500 |
| Kyocera | Kyocera FS-1050 |
| Kyocera | Kyocera FS-8000C |
| Kyocera | Kyocera FS-6950DN |
| Kyocera | Kyocera FS-3718M |
| Kyocera | Kyocera FS-6750 |
| Kyocera | Kyocera FS-1550 |
| Kyocera | Kyocera FS-C5020N |
| Kyocera | Kyocera FS-C5350DN KPDL |
| Kyocera | Kyocera FS-7000+ |

| | |
|---------|----------------------------|
| Kyocera | Kyocera KM-6330 |
| Kyocera | Kyocera TASKalfa 500ci KPD |
| Kyocera | Kyocera KM-C2630 |
| Kyocera | Kyocera KM-5035 |
| Kyocera | Kyocera CS 250ci KPD |
| Kyocera | Kyocera FS-C5200DN KPD |
| Kyocera | Kyocera FS-1714M |
| Kyocera | Kyocera FS-C5025N |
| Kyocera | Kyocera KM-5050 |
| Kyocera | Kyocera KM-C830 |
| Kyocera | Kyocera KM-5530 |
| Kyocera | Kyocera FS-3800 |
| Kyocera | Kyocera KM-1650 |
| Kyocera | Kyocera KM-C850 |
| Kyocera | Kyocera KM-4230 |
| Kyocera | Kyocera CS-C2525E KPD |
| Kyocera | Kyocera FS-1200 |
| Kyocera | Kyocera CS-2050 |
| Kyocera | Kyocera FS-1550+ |
| Kyocera | Kyocera KM-5050 KPD |
| Kyocera | Kyocera FS-9500DN |
| Kyocera | Kyocera FS-1030D |
| Kyocera | Kyocera FS-3600+ |
| Kyocera | Kyocera FS-9000 |
| Kyocera | Kyocera FS-6900 |
| Kyocera | Kyocera FS-1700 |
| Kyocera | Kyocera CS-2550 |
| Kyocera | Kyocera F-5000 |
| Kyocera | Kyocera FS-C5025N KPD |
| Kyocera | Kyocera FS-C5020N KPD |
| Kyocera | Kyocera KM-6030 |
| Kyocera | Kyocera FS-1750 |
| Kyocera | Kyocera TASKalfa 300ci KPD |
| Kyocera | Kyocera FS-2000D KPD |
| Kyocera | Kyocera KM-C4035E KPD |
| Kyocera | Kyocera FS-1600+ |
| Kyocera | Kyocera KM-5230 |
| Kyocera | Kyocera FS-3500 |
| Kyocera | Kyocera FS-9130DN KPD |
| Kyocera | Kyocera KM-1810 |
| Kyocera | Kyocera KM-1815 |
| Kyocera | Kyocera FS-2000D |
| Kyocera | Kyocera KM-C3232E KPD |

| | |
|---------|----------------------------|
| Kyocera | Kyocera KM-1820 |
| Kyocera | Kyocera KM-8030 KPD |
| Kyocera | Kyocera FS-3830N |
| Kyocera | Kyocera CS 400ci KPD |
| Kyocera | Kyocera FS-3700+ |
| Kyocera | Kyocera FS-7028M |
| Kyocera | Kyocera FS-C8100DN+ KPD |
| Kyocera | Kyocera FS-1000+ |
| Kyocera | Kyocera FS-9100DN |
| Kyocera | Kyocera Ci-1100 |
| Kyocera | Kyocera FS-5800C |
| Kyocera | Kyocera CS-C3225E KPD |
| Kyocera | Kyocera FS-4000DN KPD |
| Kyocera | Kyocera TASKalfa 250ci KPD |
| Kyocera | Kyocera FS-1118MFP |
| Kyocera | Kyocera FS-1900 |
| Kyocera | Kyocera KM-7530 |
| Kyocera | Kyocera FS-1920 |
| Kyocera | Kyocera FS-1700+ |
| Kyocera | Kyocera F-1800 |
| Kyocera | Kyocera KM-4050 KPD |
| Kyocera | Kyocera KM-6230 |
| Kyocera | Kyocera KM-C2520 |
| Kyocera | Kyocera KM-1510 |
| Kyocera | Kyocera FS-C5015N |
| Kyocera | Kyocera FS-3900DN |
| Kyocera | Kyocera FS-400 |
| Kyocera | Kyocera FS-9520DN |
| Kyocera | Kyocera FS-C5016N |
| Kyocera | Kyocera FS-C5300DN KPD |
| Kyocera | Kyocera KM-1530 |
| Kyocera | Kyocera FS-3700 |
| Kyocera | Kyocera FS-4000DN |
| Kyocera | Kyocera FS-C8100DN |
| Kyocera | Kyocera FS-920 |
| Kyocera | Kyocera KM-8030 |
| Kyocera | Kyocera FS-5900C |
| Kyocera | Kyocera FS-6300 |
| Kyocera | Kyocera FS-C5030N KPD |
| Kyocera | Kyocera FS-3750 |
| Kyocera | Kyocera P-2000 |
| Kyocera | Kyocera P-2002 |
| Kyocera | Kyocera KM-4230/5230 |

| | |
|--------------|-------------------------|
| Kyocera | Kyocera FS-1020D |
| Kyocera | Kyocera F-1000 |
| Kyocera | Kyocera FS-1800+ |
| Kyocera | Kyocera FS-1600 |
| Kyocera | Kyocera F-1010 |
| Kyocera | Kyocera FS-5500 |
| Kyocera | Kyocera KM-2030 |
| Kyocera | Kyocera FS-600 - KPDL-2 |
| Kyocera Mita | Kyocera Mita FS-6020 |
| Kyocera Mita | Kyocera Mita FS-6026 |
| Kyocera Mita | Kyocera Mita KM-3035 |
| Kyocera Mita | Kyocera Mita FS-9100DN |
| Kyocera Mita | Kyocera Mita KM-3530 |
| Kyocera Mita | Kyocera Mita FS-1800 |
| Kyocera Mita | Kyocera Mita FS-8000C |
| Kyocera Mita | Kyocera Mita CS-1815 |
| Kyocera Mita | Kyocera Mita KM-C2630 |
| Kyocera Mita | Kyocera Mita FS-9520DN |
| Kyocera Mita | Kyocera Mita FS-C5016N |
| Kyocera Mita | Kyocera Mita KM-4030 |
| Kyocera Mita | Kyocera Mita KM-4035 |
| Kyocera Mita | Kyocera Mita FS-1010 |
| Kyocera Mita | Kyocera Mita KM-4530 |
| Kyocera Mita | Kyocera Mita FS-1050 |
| Kyocera Mita | Kyocera Mita FS-6750 |
| Kyocera Mita | Kyocera Mita KM-6330 |
| Kyocera Mita | Kyocera Mita KM-5035 |
| Kyocera Mita | Kyocera Mita FS-9120DN |
| Kyocera Mita | Kyocera Mita KM-C830 |
| Kyocera Mita | Kyocera Mita KM-1650 |
| Kyocera Mita | Kyocera Mita KM-5530 |
| Kyocera Mita | Kyocera Mita FS-3800 |
| Kyocera Mita | Kyocera Mita KM-C850 |
| Kyocera Mita | Kyocera Mita FS-3830N |
| Kyocera Mita | Kyocera Mita FS-C8008N |
| Kyocera Mita | Kyocera Mita CS-2050 |
| Kyocera Mita | Kyocera Mita FS-1000+ |
| Kyocera Mita | Kyocera Mita CS-2550 |
| Kyocera Mita | Kyocera Mita KM-1810 |
| Kyocera Mita | Kyocera Mita KM-1815 |
| Kyocera Mita | Kyocera Mita FS-C8026N |
| Kyocera Mita | Kyocera Mita Ci-1100 |
| Kyocera Mita | Kyocera Mita FS-1020D |

| | |
|--------------|---------------------------|
| Kyocera Mita | Kyocera Mita FS-1800+ |
| Kyocera Mita | Kyocera Mita FS-1900 |
| Kyocera Mita | Kyocera Mita KM-7530 |
| Kyocera Mita | Kyocera Mita FS-1920 |
| Kyocera Mita | Kyocera Mita KM-6230 |
| Kyocera Mita | Kyocera Mita KM-1510 |
| Kyocera Mita | Kyocera Mita KM-1530 |
| Kyocera Mita | Kyocera Mita FS-3820N |
| Kyocera Mita | Kyocera Mita FS-1018MFP |
| Kyocera Mita | Kyocera Mita FS-9500DN |
| Kyocera Mita | Kyocera Mita KM-2030 |
| Kyocera Mita | Kyocera Mita KM-2050 |
| Kyocera Mita | Kyocera Mita KM-2530 |
| Kyocera Mita | Kyocera Mita CS-1650 |
| Kyocera Mita | Kyocera Mita KM-2550 |
| Kyocera Mita | Kyocera Mita KM-4230/5230 |
| Lanier | Lanier LD245 |
| Lanier | Lanier SP C430DN |
| Lanier | Lanier MP C2500/LD425c |
| Lanier | Lanier MP C3300/LD533C |
| Lanier | Lanier LD228c |
| Lanier | Lanier LD0105 |
| Lanier | Lanier MP 1350/LD1135 |
| Lanier | Lanier MP 4001/LD140 |
| Lanier | Lanier SP 4100NL |
| Lanier | Lanier MP 6500/LD265 |
| Lanier | Lanier Pro 1357EX |
| Lanier | Lanier MP 6001/LD360 |
| Lanier | Lanier MP C7500/LD275c |
| Lanier | Lanier MP 9000/LD190 |
| Lanier | Lanier LP332c |
| Lanier | Lanier MP C5000/LD550C |
| Lanier | Lanier LP226c/SP C410 |
| Lanier | Lanier 2132 |
| Lanier | Lanier 2138 |
| Lanier | Lanier LP335c |
| Lanier | Lanier 2145 |
| Lanier | Lanier MP 3010/LD330 |
| Lanier | Lanier LD328c |
| Lanier | Lanier LF510/515e |
| Lanier | Lanier LP175/LP175hdn |
| Lanier | Lanier LP231c/SP C411 |
| Lanier | Lanier LW7140 |



| | |
|--------|------------------------|
| Lanier | Lanier LP540C/SPC820DN |
| Lanier | Lanier MP 3350/LD433 |
| Lanier | Lanier MP 2550/LD425 |
| Lanier | Lanier SP 4110N |
| Lanier | Lanier MP 2000/LD320d |
| Lanier | Lanier LD160c |
| Lanier | Lanier LP124w |
| Lanier | Lanier MP 4000B/LD040B |
| Lanier | Lanier LP128 |
| Lanier | Lanier LC155 |
| Lanier | Lanier LD118d |
| Lanier | Lanier LP131nL |
| Lanier | Lanier LD032c |
| Lanier | Lanier LP331cn/SP C420 |
| Lanier | Lanier MP 1600/LD316 |
| Lanier | Lanier MP 8000/LD280 |
| Lanier | Lanier MP 2510/LD325 |
| Lanier | Lanier MP 9001/LD390 |
| Lanier | Lanier MP 2550B/LD425B |
| Lanier | Lanier MP C6000/LD260c |
| Lanier | Lanier LD345c |
| Lanier | Lanier SP 4210N |
| Lanier | Lanier MP C4500/LD445c |
| Lanier | Lanier LD115 |
| Lanier | Lanier LD116 |
| Lanier | Lanier LD118 |
| Lanier | Lanier LP 036c |
| Lanier | Lanier LP222cn/LP221c |
| Lanier | Lanier LD120 |
| Lanier | Lanier LD122 |
| Lanier | Lanier LD127 |
| Lanier | Lanier Pro 1107EX |
| Lanier | Lanier LD132 |
| Lanier | Lanier LD135 |
| Lanier | Lanier LD145 |
| Lanier | Lanier MP C2800/LD528C |
| Lanier | Lanier LD151 |
| Lanier | Lanier MP 3500/LD335 |
| Lanier | Lanier LD160 |
| Lanier | Lanier LD132c |
| Lanier | Lanier LD175 |
| Lanier | Lanier MP 4000/LD040 |
| Lanier | Lanier MP C4000/LD540C |



| | |
|--------|-------------------------|
| Lanier | Lanier MP 5001/LD150 |
| Lanier | Lanier MP 7500/LD275 |
| Lanier | Lanier Pro 1356EX |
| Lanier | Lanier MP 6000/LD260 |
| Lanier | Lanier MP 7001/LD370 |
| Lanier | Lanier LP37N |
| Lanier | Lanier SP 9100/LP275 |
| Lanier | Lanier LP137CN |
| Lanier | Lanier LP150dn/SP8200DN |
| Lanier | Lanier LW324 |
| Lanier | Lanier LW326 |
| Lanier | Lanier SP C400DN |
| Lanier | Lanier MP C7501/LD375C |
| Lanier | Lanier LD232c |
| Lanier | Lanier LP122c/LP121c |
| Lanier | Lanier Pro 907EX |
| Lanier | Lanier SP 4100N |
| Lanier | Lanier SP C431DN |
| Lanier | Lanier MP C3000/LD430c |
| Lanier | Lanier LD238c |
| Lanier | Lanier MP 1100/LD1100 |
| Lanier | Lanier MP 5500/LD255 |
| Lanier | Lanier LP116c |
| Lanier | Lanier SP 6330N |
| Lanier | Lanier 5622 |
| Lanier | Lanier 5627 |
| Lanier | Lanier LP032 |
| Lanier | Lanier MPC1500/LD215c |
| Lanier | Lanier LP142CN |
| Lanier | Lanier LP031c |
| Lanier | Lanier 5632 |
| Lanier | Lanier 5635 |
| Lanier | Lanier MP C2050/LD520C |
| Lanier | Lanier MP 3350B/LD433B |
| Lanier | Lanier 5645 |
| Lanier | Lanier LP550C/SPC821DN |
| Lanier | Lanier LD024c |
| Lanier | Lanier MP C3500/LD435c |
| Lanier | Lanier MP 5000B/LD050B |
| Lanier | Lanier LP 020c |
| Lanier | Lanier MP C2550/LD525C |
| Lanier | Lanier LP127n/LP128n |
| Lanier | Lanier LD335c |



| | |
|---------|-------------------------|
| Lanier | Lanier LD015 |
| Lanier | Lanier LP025N/LP026N |
| Lanier | Lanier Pro 1106EX |
| Lanier | Lanier LD035 |
| Lanier | Lanier LD120d |
| Lanier | Lanier LD045 |
| Lanier | Lanier MP 3351/LD533 |
| Lanier | Lanier LP131n |
| Lanier | Lanier LD060 |
| Lanier | Lanier LD075 |
| Lanier | Lanier MP 4500/LD345 |
| Lanier | Lanier MP2500/LD125 |
| Lanier | Lanier LD124c |
| Lanier | Lanier MP 171/LD 117 |
| Lanier | Lanier LD090 |
| Lanier | Lanier LW5100 |
| Lanier | Lanier LP135n |
| Lanier | Lanier MP 5000/LD050 |
| Lanier | Lanier LP136n |
| Lanier | Lanier LP138c |
| Lanier | Lanier LP440c/SP C811DN |
| Lanier | Lanier MP C6501/LD365C |
| Lanier | Lanier MP 7000/LD270 |
| Lanier | Lanier MP 8001/LD380 |
| Lanier | Lanier LP025/LP026 |
| Lanier | Lanier LP125cx/LP126cn |
| Lanier | Lanier MP 2851/LD528 |
| Lanier | Lanier LP145n/SP 8100DN |
| Lanier | Lanier LP235N |
| Lanier | Lanier LP235c |
| Lanier | Lanier LD225 |
| Lanier | Lanier Pro 906EX |
| Lanier | Lanier MP 161/LD016 |
| Lanier | Lanier LD230 |
| Lanier | Lanier LD235 |
| Lexmark | Lexmark C920n |
| Lexmark | Lexmark C534dn |
| Lexmark | Lexmark C790 Series |
| Lexmark | Lexmark C532n |
| Lexmark | Lexmark E462dtn |
| Lexmark | Lexmark C534n |
| Lexmark | Lexmark EG460dn |
| Lexmark | Lexmark C534dtn |



| | |
|---------|-------------------------|
| Lexmark | Lexmark 3200 |
| Lexmark | Lexmark X920 |
| Lexmark | Lexmark 4076 |
| Lexmark | Lexmark X925 |
| Lexmark | Lexmark X860de |
| Lexmark | Lexmark X734de |
| Lexmark | Lexmark X463de |
| Lexmark | Lexmark Optra E |
| Lexmark | Lexmark X940e |
| Lexmark | Lexmark C500n |
| Lexmark | Lexmark 5000 |
| Lexmark | Lexmark X363dn |
| Lexmark | Lexmark X945e |
| Lexmark | Lexmark 4039 10plus |
| Lexmark | Lexmark 1020 Business |
| Lexmark | Lexmark C780dn |
| Lexmark | Lexmark X342n |
| Lexmark | Lexmark E460dn |
| Lexmark | Lexmark E260d |
| Lexmark | Lexmark E460dw |
| Lexmark | Lexmark Valuedriver 300 |
| Lexmark | Lexmark X652de |
| Lexmark | Lexmark Optra K 1220 |
| Lexmark | Lexmark E120 |
| Lexmark | Lexmark E360dn |
| Lexmark | Lexmark C772dn |
| Lexmark | Lexmark Optra W810 |
| Lexmark | Lexmark W812 |
| Lexmark | Lexmark X920 Series |
| Lexmark | Lexmark X862de |
| Lexmark | Lexmark Optra M410 |
| Lexmark | Lexmark Optra M412 |
| Lexmark | Lexmark C780n |
| Lexmark | Lexmark X73 |
| Lexmark | Lexmark X736de |
| Lexmark | Lexmark W840 |
| Lexmark | Lexmark E260dn |
| Lexmark | Lexmark C782n |
| Lexmark | Lexmark W850 |
| Lexmark | Lexmark E352dn |
| Lexmark | Lexmark C780dtn |
| Lexmark | Lexmark E360d |
| Lexmark | Lexmark C510 |

| | |
|---------|------------------------|
| Lexmark | Lexmark C935dn |
| Lexmark | Lexmark C520 |
| Lexmark | Lexmark C522 |
| Lexmark | Lexmark C524 |
| Lexmark | Lexmark C770dtn |
| Lexmark | Lexmark C540 |
| Lexmark | Lexmark C543 |
| Lexmark | Lexmark C544 |
| Lexmark | Lexmark C546 |
| Lexmark | Lexmark Optra E+ |
| Lexmark | Lexmark 5700 |
| Lexmark | Lexmark Optra Ep |
| Lexmark | Lexmark T430 |
| Lexmark | Lexmark Optra Color 40 |
| Lexmark | Lexmark Optra Color 45 |
| Lexmark | Lexmark C782dn |
| Lexmark | Lexmark Optra E310 |
| Lexmark | Lexmark Optra E312 |
| Lexmark | Lexmark X654de |
| Lexmark | Lexmark Optra E321 |
| Lexmark | Lexmark Optra E323 |
| Lexmark | Lexmark 7000 |
| Lexmark | Lexmark X790 Series |
| Lexmark | Lexmark Z12 |
| Lexmark | Lexmark E320 |
| Lexmark | Lexmark Z22 |
| Lexmark | Lexmark Z31 |
| Lexmark | Lexmark Z32 |
| Lexmark | Lexmark Z42 |
| Lexmark | Lexmark Z43 |
| Lexmark | Lexmark C752b |
| Lexmark | Lexmark Z51 |
| Lexmark | Lexmark Z52 |
| Lexmark | Lexmark Z53 |
| Lexmark | Lexmark X864de |
| Lexmark | Lexmark Optra R+ |
| Lexmark | Lexmark X466dte |
| Lexmark | Lexmark X738de |
| Lexmark | Lexmark C935dtn |
| Lexmark | Lexmark Z82 |
| Lexmark | Lexmark C530dn |
| Lexmark | Lexmark X466dwe |
| Lexmark | Lexmark Optra C710 |

| | |
|---------|--------------------------|
| Lexmark | Lexmark Optra S 1855 |
| Lexmark | Lexmark Optra T610 |
| Lexmark | Lexmark Optra T612 |
| Lexmark | Lexmark Optra T614 |
| Lexmark | Lexmark Optra T616 |
| Lexmark | Lexmark C734 |
| Lexmark | Lexmark C736 |
| Lexmark | Lexmark C750 |
| Lexmark | Lexmark C752 |
| Lexmark | Lexmark X651de |
| Lexmark | Lexmark E120n |
| Lexmark | Lexmark T640 |
| Lexmark | Lexmark T642 |
| Lexmark | Lexmark T644 |
| Lexmark | Lexmark X203n |
| Lexmark | Lexmark Optra Se 3455 |
| Lexmark | Lexmark C782dtn |
| Lexmark | Lexmark C780 |
| Lexmark | Lexmark C782 |
| Lexmark | Lexmark T650 |
| Lexmark | Lexmark T652 |
| Lexmark | Lexmark T654 |
| Lexmark | Lexmark T656 |
| Lexmark | Lexmark X543 |
| Lexmark | Lexmark X544 |
| Lexmark | Lexmark X546 |
| Lexmark | Lexmark X204n |
| Lexmark | Lexmark C790 |
| Lexmark | Lexmark C792 |
| Lexmark | Lexmark C720n |
| Lexmark | Lexmark X656de |
| Lexmark | Lexmark Optra Color 1200 |
| Lexmark | Lexmark X642e |
| Lexmark | Lexmark C770n |
| Lexmark | Lexmark C772n |
| Lexmark | Lexmark X464de |
| Lexmark | Lexmark X560n |
| Lexmark | Lexmark 2050 |
| Lexmark | Lexmark Optra Color 1275 |
| Lexmark | Lexmark C510b |
| Lexmark | Lexmark TG654 |
| Lexmark | Lexmark C532dn |
| Lexmark | Lexmark E350d |



| | |
|-------------|-------------------------------|
| Lexmark | Lexmark X364dn |
| Lexmark | Lexmark X364dw |
| Lexmark | Lexmark C920 Series |
| Lexmark | Lexmark C910 |
| Lexmark | Lexmark C912 |
| Lexmark | Lexmark C920 |
| Lexmark | Lexmark C925 |
| Lexmark | Lexmark X264dn |
| Lexmark | Lexmark C930 |
| Lexmark | Lexmark C935 |
| Lexmark | Lexmark C935hdn |
| Lexmark | Lexmark 3000 |
| Lexmark | Lexmark Optra E220 |
| Lexmark | Lexmark Winwriter 400 |
| Lexmark | Lexmark E210 |
| Lexmark | Lexmark E230 |
| Lexmark | Lexmark E238 |
| Lexmark | Lexmark X658de |
| Lexmark | Lexmark E260 |
| Lexmark | Lexmark X790 |
| Lexmark | Lexmark X792 |
| Lexmark | Lexmark X466de |
| Lexmark | Lexmark Optra S 1250 |
| Minolta | Minolta PagePro 1200W |
| Minolta | Minolta PagePro 1250E |
| Minolta | Minolta PagePro 1250W |
| Minolta | Minolta PagePro 1300W |
| Minolta | Minolta magicolor 3100 |
| Minolta | Minolta PagePro 1350W |
| Minolta | Minolta PagePro 6 |
| Minolta | Minolta PagePro 8 |
| Minolta | Minolta PagePro 1400W |
| Minolta | Minolta PagePro 6ex |
| Minolta | Minolta PagePro 1100 |
| Minolta | Minolta PagePro 6e |
| Minolta | Minolta PagePro 8L |
| Minolta QMS | Minolta QMS PagePro 9100N |
| Mitsubishi | Mitsubishi CP50 Color Printer |
| NEC | NEC PinWriter P7 plus |
| NEC | NEC PinWriter P6 |
| NEC | NEC PinWriter P7 |
| NEC | NEC Silentwriter2 model 290 |
| NEC | NEC SuperScript 650C |



| | |
|-----|-------------------------|
| NEC | NEC PC-PR201 |
| NEC | NEC SuperScript 1800 |
| NEC | NEC MultiWriter |
| NEC | NEC PC-PR1000 |
| NEC | NEC SuperScript 750C |
| NEC | NEC PICTY180 |
| NEC | NEC Silentwriter2 S60P |
| NEC | NEC SuperScript 860 |
| NEC | NEC SuperScript 870 |
| NEC | NEC SuperScript 100C |
| NEC | NEC PinWriter P6 plus |
| NEC | NEC P2X |
| NEC | NEC SuperScript 150C |
| NEC | NEC PC-PR2000 |
| NEC | NEC Silentwriter 95f |
| NEC | NEC SuperScript 4600N |
| NEC | NEC SuperScript 1260 |
| NEC | NEC PC-PR150 |
| NEC | NEC Pinwriter P20 |
| NEC | NEC PinWriter P60 |
| NEC | NEC PinWriter P70 |
| NEC | NEC SilentWriter LC 890 |
| NEC | NEC SuperScript 660i |
| NEC | NEC SuperScript 1400 |
| NRG | NRG P7145 |
| NRG | NRG C7521n |
| NRG | NRG C7010 |
| NRG | NRG MP C4500 |
| NRG | NRG C7425hdn |
| NRG | NRG MP 2550B |
| NRG | NRG MP 1100 |
| NRG | NRG DSm615 |
| NRG | NRG DSm415 |
| NRG | NRG MP 5000 |
| NRG | NRG MP 5001 |
| NRG | NRG C7528n |
| NRG | NRG MP 5000B |
| NRG | NRG MP C1500sp |
| NRG | NRG MP 1600 |
| NRG | NRG MP W7140 |
| NRG | NRG SP W2470 |
| NRG | NRG MP 5500 |
| NRG | NRG MP W2400 |

| | |
|-----|--------------------|
| NRG | NRG MP 4000B |
| NRG | NRG MP C5000 |
| NRG | NRG Pro 1107EX |
| NRG | NRG P7325 |
| NRG | NRG P7535n |
| NRG | NRG MP 6000 |
| NRG | NRG MP 6001 |
| NRG | NRG SP 4100N |
| NRG | NRG 4525/4508/4502 |
| NRG | NRG Pro 907EX |
| NRG | NRG 2705/2738/2712 |
| NRG | NRG P7431cn |
| NRG | NRG Pro 1356EX |
| NRG | NRG SP C431DN |
| NRG | NRG SP 6330N |
| NRG | NRG MP 6500 |
| NRG | NRG DSm615 |
| NRG | NRG DSm616 |
| NRG | NRG DSm618 |
| NRG | NRG SP C820DN |
| NRG | NRG DSm620 |
| NRG | NRG DSm622 |
| NRG | NRG DSm627 |
| NRG | NRG P7325N |
| NRG | NRG DSm632 |
| NRG | NRG DSm635 |
| NRG | NRG DSm645 |
| NRG | NRG MP C6000 |
| NRG | NRG DSc224 |
| NRG | NRG MP 1350 |
| NRG | NRG DSm651 |
| NRG | NRG DSc38 |
| NRG | NRG DSc232 |
| NRG | NRG 7502/7505/7508 |
| NRG | NRG DSm660 |
| NRG | NRG DSm675 |
| NRG | NRG SP C410DN |
| NRG | NRG MP C6501 |
| NRG | NRG DSm620d |
| NRG | NRG 3545/3518/3532 |
| NRG | NRG P7026 |
| NRG | NRG MP 7000 |
| NRG | NRG MP 7001 |

| | |
|-----|-----------------------|
| NRG | NRG P7032 |
| NRG | NRG 2205/2238/2212 |
| NRG | NRG 10515/10518/10512 |
| NRG | NRG MP 7500 |
| NRG | NRG P7527 |
| NRG | NRG CS555 |
| NRG | NRG C7416 |
| NRG | NRG P7575 |
| NRG | NRG MP W3600 |
| NRG | NRG SP C420DN |
| NRG | NRG C7435n |
| NRG | NRG MP C7500 |
| NRG | NRG MP C7501 |
| NRG | NRG MP 2851 |
| NRG | NRG SP 9100DN |
| NRG | NRG DSc424 |
| NRG | NRG DSc428 |
| NRG | NRG MP 8000 |
| NRG | NRG MP 8001 |
| NRG | NRG DSc432 |
| NRG | NRG DSc435 |
| NRG | NRG DSc445 |
| NRG | NRG MP C2800 |
| NRG | NRG DSc460 |
| NRG | NRG P7132N |
| NRG | NRG C7535hdn |
| NRG | NRG Pro 1106EX |
| NRG | NRG C7425dn |
| NRG | NRG MP 2000 |
| NRG | NRG MP 3350 |
| NRG | NRG MP 3351 |
| NRG | NRG Pro 906EX |
| NRG | NRG 3525/3508/3502 |
| NRG | NRG 9005/9008/9002 |
| NRG | NRG P7527n |
| NRG | NRG MP 2500 |
| NRG | NRG C7116 |
| NRG | NRG SP C430DN |
| NRG | NRG MP 2510 |
| NRG | NRG MP C3300 |
| NRG | NRG MP 2550 |
| NRG | NRG SP 4100NL |
| NRG | NRG MP 3350B |

| | |
|-----|-------------------------|
| NRG | NRG MP 9000 |
| NRG | NRG MP 9001 |
| NRG | NRG MP C2500 |
| NRG | NRG MP C2050 |
| NRG | NRG SP C811DN |
| NRG | NRG MP 161 |
| NRG | NRG MP 171 |
| NRG | NRG MP W5100 |
| NRG | NRG MP 3010 |
| NRG | NRG MP C2550 |
| NRG | NRG MP 3500 |
| NRG | NRG DSm618d |
| NRG | NRG SP 4110N |
| NRG | NRG MP C3000 |
| NRG | NRG P7026N |
| NRG | NRG Pro 1357EX |
| NRG | NRG SP 8200DN |
| NRG | NRG MP C3500 |
| NRG | NRG 6002/6005/6008 |
| NRG | NRG SP C821DN |
| NRG | NRG DSm725 |
| NRG | NRG DSm730 |
| NRG | NRG DSm735 |
| NRG | NRG MP 4000 |
| NRG | NRG MP 4001 |
| NRG | NRG DSm745 |
| NRG | NRG CC7417 |
| NRG | NRG DSc328 |
| NRG | NRG SP 8100DN |
| NRG | NRG DSc332 |
| NRG | NRG DSc338 |
| NRG | NRG SP C411DN |
| NRG | NRG MP 4500 |
| NRG | NRG 4545/4518/4532 |
| NRG | NRG DSc38u |
| NRG | NRG P7126 |
| NRG | NRG SP 4210N |
| NRG | NRG 3205/3238/3212 |
| NRG | NRG P7126N |
| NRG | NRG MP C4000 |
| Oce | Oce PPC for 3094 PS3 |
| Oce | Oce VarioPrint 2050 PS3 |
| Oce | Oce cm6520 |

| | |
|-----|-------------------------|
| Oce | Oce PPC for 3093 PS3 |
| Oce | Oce 9245 Series PS2 |
| Oce | Oce im3512 |
| Oce | Oce im3530 |
| Oce | Oce VarioPrint 2100 PS3 |
| Oce | Oce NC3145 PS2 |
| Oce | Oce NC3145 PS3 |
| Oce | Oce PPC for 5160 PS2 |
| Oce | Oce VarioPrint 2070 PS3 |
| Oce | Oce VarioPrint 2045 PS3 |
| Oce | Oce im9220 |
| Oce | Oce PPC5115 |
| Oce | Oce im4512 |
| Oce | Oce im4530 |
| Oce | Oce VarioPrint 2045 |
| Oce | Oce VarioPrint 2050 |
| Oce | Oce VarioPrint 2055 |
| Oce | Oce 3145 |
| Oce | Oce PPC5160 |
| Oce | Oce VarioPrint 2060 |
| Oce | Oce VarioPrint 2065 |
| Oce | Oce 3155 |
| Oce | Oce NC3165 PS2 |
| Oce | Oce NC3165 PS3 |
| Oce | Oce VarioPrint 2070 |
| Oce | Oce 3165 |
| Oce | Oce VarioPrint 2090 |
| Oce | Oce VarioPrint 2065 PS3 |
| Oce | Oce VarioPrint 2090 PS3 |
| Oce | Oce PPC3073 |
| Oce | Oce PPC3074 |
| Oce | Oce PPC for 3114 PS3 |
| Oce | Oce PPC3093 |
| Oce | Oce PPC3094 |
| Oce | Oce im5530 |
| Oce | Oce PPC for 3113 PS3 |
| Oce | Oce cm2510 |
| Oce | Oce cm2520 |
| Oce | Oce sx1480 |
| Oce | Oce im6020 |
| Oce | Oce im6030 |
| Oce | Oce 8445 PS2 |
| Oce | Oce 8445 PS3 |

LANTRONIX®

| | |
|-----|-------------------------|
| Oce | Oce cm3521 |
| Oce | Oce 9050 |
| Oce | Oce VarioPrint 2060 PS3 |
| Oce | Oce fx2080 |
| Oce | Oce VarioPrint 2110 PS3 |
| Oce | Oce NC3155 PS2 |
| Oce | Oce NC3155 PS3 |
| Oce | Oce cm4010 |
| Oce | Oce im7520 |
| Oce | Oce 9230 Series PS2 |
| Oce | Oce im2330 |
| Oce | Oce fx3000 |
| Oce | Oce 8465 PS2 |
| Oce | Oce 8465 PS3 |
| Oce | Oce cm4520 |
| Oce | Oce cm4521 |
| Oce | Oce sx2100 |
| Oce | Oce im2830 |
| Oce | Oce VarioPrint 2055 PS3 |
| Oce | Oce 9230 |
| Oce | Oce 9245 |
| Oce | Oce 9260 |
| Oce | Oce VarioPrint 2100 |
| Oce | Oce VarioPrint 2105 |
| Oce | Oce VarioPrint 2110 |
| Oce | Oce 9260 Series PS2 |
| Oce | Oce VarioPrint 2105 PS3 |
| Oce | Oce PPC for 3074 PS3 |
| Oce | Oce 8445 |
| Oce | Oce im8530 |
| Oce | Oce 8465 |
| Oce | Oce im7230 |
| Oce | Oce cm5520 |
| Oce | Oce PPC for 3073 PS3 |
| Oce | Oce PPC3113 |
| Oce | Oce PPC3114 |
| Oce | Oce PPC for 5115 PS2 |
| Oki | OKI C9200 |
| Oki | Oki Okipage 8w Lite |
| Oki | Oki B4300 |
| Oki | Oki OL600e |
| Oki | Oki C7400 |
| Oki | Oki C6100 |

| | |
|-----|---------------------|
| Oki | Oki B4350 |
| Oki | Oki Okipage 20DXn |
| Oki | OKI C7100 |
| Oki | Oki Okipage 10ex |
| Oki | Oki C6150 |
| Oki | Oki C5300 |
| Oki | Oki OL800 |
| Oki | Oki C9200 |
| Oki | Oki Okipage 10e |
| Oki | Oki Okipage 12i |
| Oki | OKI C9400 |
| Oki | Oki C5550 MFP |
| Oki | Oki C7100 |
| Oki | Oki ML 320 |
| Oki | Oki ML 321 |
| Oki | OKI C7300 |
| Oki | Oki B2400 |
| Oki | Oki OL410e |
| Oki | Oki B6300 |
| Oki | Oki ML 380 |
| Oki | Oki B4545 MFP |
| Oki | Oki C9400 |
| Oki | Oki OL610e/S |
| Oki | Oki OL810e/PS |
| Oki | Oki OL610e/PS |
| Oki | OKI C5700 |
| Oki | Oki B4200 |
| Oki | OKI C9600 |
| Oki | Oki C7300 |
| Oki | Oki C6000 |
| Oki | Oki B4250 |
| Oki | Oki Microline 600CL |
| Oki | Oki Okijet 2500 |
| Oki | Oki C7350 |
| Oki | OKI C8800 |
| Oki | Oki C6050 |
| Oki | OKI C7500 |
| Oki | OKIPAGE 14i |
| Oki | Oki Okipage 14ex |
| Oki | Oki DP 5000 |
| Oki | Oki B6500 |
| Oki | Oki C5700 |
| Oki | Oki C9600 |

| | |
|-----|------------------------------------|
| Oki | Oki C9800 MFP |
| Oki | OKI C5400 |
| Oki | Oki C5750 |
| Oki | OKI C9300 |
| Oki | Oki C9650 |
| Oki | Oki Okipage 4w+ |
| Oki | OKI C5900 |
| Oki | OKI C5450 |
| Oki | Oki C8800 |
| Oki | Oki B4400 |
| Oki | Oki C5540 MFP |
| Oki | Oki C7500 |
| Oki | Oki C710 |
| Oki | Oki OL830Plus |
| Oki | Oki Okipage 6ex |
| Oki | OKI C7200 |
| Oki | Oki B410 |
| Oki | Oki OL400 |
| Oki | Oki C7550 |
| Oki | Oki B4600 PS |
| Oki | Oki OL400e |
| Oki | Oki B6200 |
| Oki | Oki OL400w |
| Oki | Oki C5400 |
| Oki | Oki C9300 |
| Oki | Oki Microline 182 |
| Oki | Oki B6250 |
| Oki | Oki C5900 |
| Oki | Oki C5450 |
| Oki | Oki Microline 620CL |
| Oki | Oki C9800 |
| Oki | Oki OL810ex |
| Oki | OKI C9500 |
| Oki | Oki C7200 |
| Oki | Oki 14i |
| Oki | Oki Microline IBM compatible 9 pin |
| Oki | Oki OL400ex |
| Oki | Oki Okipage 4w |
| Oki | Oki B4600 |
| Oki | Oki Okipage 6e |
| Oki | Oki Okipage 6w |
| Oki | Oki Okipage 8c |
| Oki | Oki Okipage 8p |

| | |
|-----------|--------------------|
| Oki | Oki Okipage 8w |
| Oki | Oki Okipage 8z |
| Oki | OKI B4300 |
| Oki | OKI C7400 |
| Oki | OKI C6100 |
| Oki | OKI B4350 |
| Oki | Oki C9500 |
| Oki | Oki B2540 MFP |
| Oki | Oki Super 6e |
| Oki | Oki Microline 192+ |
| Oki | OKI C5300 |
| Olivetti | Olivetti JP450 |
| Olivetti | Olivetti JP470 |
| Olivetti | Olivetti PG 306 |
| Olivetti | Olivetti JP350S |
| Olympus | Olympus P-330E |
| Olympus | Olympus P-330NE |
| Olympus | Olympus P-300E |
| Olympus | Olympus P-300U |
| Olympus | Olympus P-200 |
| Olympus | Olympus P-10 |
| Olympus | Olympus P-11 |
| Olympus | Olympus P-400 |
| Olympus | Olympus P-440 |
| Olympus | Olympus P-S100 |
| Olympus | Olympus P-300 |
| Panasonic | Panasonic DP-4510 |
| Panasonic | Panasonic DP-4520 |
| Panasonic | Panasonic DP-C305 |
| Panasonic | Panasonic KX-P6150 |
| Panasonic | Panasonic DP-C322 |
| Panasonic | Panasonic DP-C354 |
| Panasonic | Panasonic DP-8016P |
| Panasonic | Panasonic KX-P8420 |
| Panasonic | Panasonic KX-P8475 |
| Panasonic | Panasonic KX-P1123 |
| Panasonic | Panasonic KX-P1124 |
| Panasonic | Panasonic KX-P1150 |
| Panasonic | Panasonic KX-P1624 |
| Panasonic | Panasonic KX-P2123 |
| Panasonic | Panasonic KX-P2135 |
| Panasonic | Panasonic KX-P2150 |
| Panasonic | Panasonic KX-P6500 |

| | |
|-----------|------------------------------|
| Panasonic | Panasonic DP-2330 |
| Panasonic | Panasonic DP-C213 |
| Panasonic | Panasonic DP-C262 |
| Panasonic | Panasonic DP-C264 |
| Panasonic | Panasonic DP-C265 |
| Panasonic | Panasonic KX-P4410 |
| Panasonic | Panasonic DP-8045 |
| Panasonic | Panasonic KX-P4450 |
| Panasonic | Panasonic DP-8060 |
| Panasonic | Panasonic DP-180 |
| Panasonic | Panasonic DP-C405 |
| Panasonic | Panasonic KX-P5400 |
| Panasonic | Panasonic DP-8020E |
| Panasonic | Panasonic KX-P2023 |
| PCPI | PCPI 1030 |
| QMS | QMS LPK-100 |
| QMS | QMS ps-810 |
| QMS | QMS magicolor 2+ |
| QMS | QMS 2425 Turbo EX |
| Raven | Raven LP-410 |
| Ricoh | Ricoh Aficio MP W5100 |
| Ricoh | Ricoh Aficio 3260C |
| Ricoh | Ricoh Aficio MP C2550 |
| Ricoh | Ricoh RPD L II Laser Printer |
| Ricoh | Ricoh Aficio CL1000N |
| Ricoh | Ricoh 4081 |
| Ricoh | Ricoh Aficio 2105 |
| Ricoh | Ricoh Aficio CL4000HDN |
| Ricoh | Ricoh Aficio SP 4110N |
| Ricoh | Ricoh Aficio CL3000 |
| Ricoh | Ricoh Aficio MP 6000 |
| Ricoh | Ricoh Aficio MP 6001 |
| Ricoh | Ricoh GX e5550N |
| Ricoh | Ricoh Aficio MP C3000 |
| Ricoh | Ricoh Aficio SP C400DN |
| Ricoh | Ricoh FAX5510L/5510NF |
| Ricoh | Ricoh Aficio MP 6500 |
| Ricoh | Ricoh Aficio MP C3500 |
| Ricoh | Ricoh Pro 906EX |
| Ricoh | Ricoh Aficio SP C431DN |
| Ricoh | Ricoh Aficio MP 1350 |
| Ricoh | Ricoh Aficio AP600N |
| Ricoh | Ricoh Aficio 3232C |

| | |
|-------|------------------------|
| Ricoh | Ricoh Aficio CL4000DN |
| Ricoh | Ricoh Aficio AP2600 |
| Ricoh | Ricoh Pro 1106EX |
| Ricoh | Ricoh Aficio SP C820DN |
| Ricoh | Ricoh Aficio AP2610 |
| Ricoh | Ricoh Aficio 3235C |
| Ricoh | Ricoh Aficio SP 4210N |
| Ricoh | Ricoh DDP 70 |
| Ricoh | Ricoh Aficio AP2600N |
| Ricoh | Ricoh LASER AP2600N |
| Ricoh | Ricoh Aficio MP 7000 |
| Ricoh | Ricoh Aficio MP 7001 |
| Ricoh | Ricoh Aficio 2232C |
| Ricoh | Ricoh Aficio MP C4000 |
| Ricoh | Ricoh Aficio SP C410DN |
| Ricoh | Ricoh DDP 92 |
| Ricoh | Ricoh 6000 |
| Ricoh | Ricoh MP C1500/615C |
| Ricoh | Ricoh Aficio 1022 |
| Ricoh | Ricoh Aficio 1027 |
| Ricoh | Ricoh Aficio MP 7500 |
| Ricoh | Ricoh Aficio MP C4500 |
| Ricoh | Ricoh Aficio 1032 |
| Ricoh | Ricoh Aficio 1035 |
| Ricoh | Ricoh LASER AP2600 |
| Ricoh | Ricoh Aficio MP 2550B |
| Ricoh | Ricoh Aficio 1045 |
| Ricoh | Ricoh Aficio 2238C |
| Ricoh | Ricoh Aficio 1232C |
| Ricoh | Ricoh LASER AP2610 |
| Ricoh | Ricoh Aficio CL7100 |
| Ricoh | Ricoh Aficio 1515 |
| Ricoh | Ricoh Aficio 1060 |
| Ricoh | Ricoh Aficio 2020D |
| Ricoh | Ricoh Aficio 1075 |
| Ricoh | Ricoh Aficio MP 5000B |
| Ricoh | Ricoh Aficio MP W7140 |
| Ricoh | Ricoh Aficio SP W2470 |
| Ricoh | Ricoh GX 3050SFN |
| Ricoh | Ricoh Aficio MP W2400 |
| Ricoh | Ricoh Aficio MP 2851 |
| Ricoh | Ricoh Aficio MP 4000B |
| Ricoh | Ricoh Aficio CL5000 |

| | |
|-------|------------------------|
| Ricoh | Ricoh GX 5050N |
| Ricoh | Ricoh Aficio MP 8000 |
| Ricoh | Ricoh Aficio MP 8001 |
| Ricoh | Ricoh Aficio MP C5000 |
| Ricoh | Ricoh Aficio SP C420DN |
| Ricoh | Ricoh Aficio MP 161 |
| Ricoh | Ricoh Aficio MP 171 |
| Ricoh | Ricoh Aficio 2015 |
| Ricoh | Ricoh Aficio 2016 |
| Ricoh | Ricoh Aficio 2018 |
| Ricoh | Ricoh Aficio SP 9100DN |
| Ricoh | Ricoh Aficio 2020 |
| Ricoh | Ricoh Aficio 2022 |
| Ricoh | Ricoh Aficio 2027 |
| Ricoh | Ricoh Aficio 2032 |
| Ricoh | Ricoh Aficio 2035 |
| Ricoh | Ricoh Aficio 2045 |
| Ricoh | Ricoh Aficio 2051 |
| Ricoh | Ricoh ColorLaser AP828 |
| Ricoh | Ricoh Aficio SP 4100N |
| Ricoh | Ricoh Aficio MP 2000 |
| Ricoh | Ricoh Aficio 2060 |
| Ricoh | Ricoh Aficio 2075 |
| Ricoh | Ricoh Pro 1357EX |
| Ricoh | Ricoh Aficio AP410N |
| Ricoh | Ricoh Aficio MP 3350 |
| Ricoh | Ricoh Aficio MP 3351 |
| Ricoh | Ricoh GX 3050N |
| Ricoh | Ricoh Aficio 2090 |
| Ricoh | Ricoh Aficio Color5560 |
| Ricoh | Ricoh Aficio AP3800C |
| Ricoh | Ricoh Aficio MP 2500 |
| Ricoh | Ricoh Aficio SP 6330N |
| Ricoh | Ricoh Aficio MP 2510 |
| Ricoh | Ricoh Aficio CL7300 |
| Ricoh | Ricoh Aficio MP 9000 |
| Ricoh | Ricoh Aficio MP 9001 |
| Ricoh | Ricoh Aficio MP 2550 |
| Ricoh | Ricoh Aficio MP C6000 |
| Ricoh | Ricoh Aficio SP C430DN |
| Ricoh | Ricoh Aficio 2045e |
| Ricoh | Ricoh Aficio MP C6501 |
| Ricoh | Ricoh Aficio 3025 |

| | |
|-------|-------------------------------|
| Ricoh | Ricoh Aficio SP 4100NL |
| Ricoh | Ricoh Aficio 3030 |
| Ricoh | Ricoh Aficio 3035 |
| Ricoh | Ricoh Aficio 3224C |
| Ricoh | Ricoh Aficio 3045 |
| Ricoh | Ricoh Aficio MP 3010 |
| Ricoh | Ricoh RPD L IV Laser Printer |
| Ricoh | Ricoh Aficio 3228C |
| Ricoh | Ricoh Aficio SP C811DN |
| Ricoh | Ricoh Aficio MP 3500 |
| Ricoh | Ricoh Aficio CL3100 |
| Ricoh | Ricoh Aficio 2228C |
| Ricoh | Ricoh Aficio CL3500N |
| Ricoh | Ricoh Aficio CL7000 |
| Ricoh | Ricoh Aficio 1224C |
| Ricoh | Ricoh Aficio AP400 |
| Ricoh | Ricoh Aficio MP W3600 |
| Ricoh | Ricoh Aficio 220 |
| Ricoh | Ricoh Aficio AP410 |
| Ricoh | Ricoh Pro 907EX |
| Ricoh | Ricoh Aficio MP C7500 |
| Ricoh | Ricoh Aficio MP C7501 |
| Ricoh | Ricoh Aficio 700 |
| Ricoh | Ricoh Aficio AP900 |
| Ricoh | Ricoh Aficio MP 4000 |
| Ricoh | Ricoh Aficio MP 4001 |
| Ricoh | Ricoh Aficio 2018D |
| Ricoh | Ricoh Aficio AP610N |
| Ricoh | Ricoh Aficio MP C2800 |
| Ricoh | Ricoh Aficio SP 8200DN |
| Ricoh | Ricoh Aficio MP 4500 |
| Ricoh | Ricoh Pro 1107EX |
| Ricoh | Ricoh 4801 |
| Ricoh | Ricoh Aficio SP C821DN |
| Ricoh | Ricoh RPD L III Laser Printer |
| Ricoh | Ricoh Aficio 3245C |
| Ricoh | Ricoh RPD L I Laser Printer |
| Ricoh | Ricoh Aficio SP 8100DN |
| Ricoh | Ricoh Aficio AP2610N |
| Ricoh | Ricoh LASER AP2610N |
| Ricoh | Ricoh Aficio SP C222SF |
| Ricoh | Ricoh Aficio SP C411DN |
| Ricoh | Ricoh Pro 1356EX |

| | |
|---------|-----------------------|
| Ricoh | Ricoh Aficio AP400N |
| Ricoh | Ricoh GX e3350N |
| Ricoh | Ricoh EMP 156 |
| Ricoh | Ricoh Aficio CL7200 |
| Ricoh | Ricoh Aficio MP C3300 |
| Ricoh | Ricoh Aficio AP4510 |
| Ricoh | Ricoh Aficio MP 1100 |
| Ricoh | Ricoh Aficio CL2000 |
| Ricoh | Ricoh Aficio CL3000e |
| Ricoh | Ricoh Aficio MP 5000 |
| Ricoh | Ricoh Aficio MP 5001 |
| Ricoh | Ricoh Aficio AP3200 |
| Ricoh | Ricoh Aficio 401 |
| Ricoh | Ricoh Aficio MP 3350B |
| Ricoh | Ricoh Aficio MP 1600 |
| Ricoh | Ricoh Aficio MP 5500 |
| Ricoh | Ricoh Aficio 2035e |
| Ricoh | Ricoh Aficio MP C2500 |
| Ricoh | Ricoh Aficio MP C2050 |
| Samsung | Samsung ML-1020 |
| Samsung | Samsung ML-7000N |
| Samsung | Samsung ML-7000P |
| Samsung | Samsung ML-1510 |
| Samsung | Samsung ML-1520 |
| Samsung | Samsung ML-2151NPS |
| Samsung | Samsung ML-2551N |
| Samsung | Samsung ML-3470D |
| Samsung | Samsung ML-2552W |
| Samsung | Samsung ML-4600 |
| Samsung | Samsung ML-5000a |
| Samsung | Samsung ML-2150PS |
| Samsung | Samsung ML-2010 |
| Samsung | Samsung ML-4050N |
| Samsung | Samsung ML-1200 |
| Samsung | Samsung ML-1210 |
| Samsung | Samsung ML-2550 |
| Samsung | Samsung ML-1220 |
| Samsung | Samsung ML-2570 |
| Samsung | Samsung CLP-660N |
| Samsung | Samsung ML-1250 |
| Samsung | Samsung ML-1710 |
| Samsung | Samsung ML-3051N |
| Samsung | Samsung ML-1740 |

| | |
|---------|--------------------|
| Samsung | Samsung ML-1651N |
| Samsung | Samsung ML-1750 |
| Samsung | Samsung ML-2571N |
| Samsung | Samsung CLP-650 |
| Samsung | Samsung ML-3051ND |
| Samsung | Samsung ML-2851ND |
| Samsung | Samsung ML-6100 |
| Samsung | Samsung ML-1450PS |
| Samsung | Samsung ML-2250 |
| Samsung | Samsung ML-1410 |
| Samsung | Samsung ML-1430 |
| Samsung | Samsung ML-1440 |
| Samsung | Samsung ML-3471ND |
| Samsung | Samsung ML-2151N |
| Samsung | Samsung ML-1450 |
| Samsung | Samsung ML-7300N |
| Samsung | Samsung ML-2152W |
| Samsung | Samsung CLP-550N |
| Samsung | Samsung ML-4500 |
| Samsung | Samsung CLP-350 |
| Samsung | Samsung ML-2850D |
| Samsung | Samsung ML-4550 |
| Samsung | Samsung QL-5100A |
| Samsung | Samsung CLP-650N |
| Samsung | Samsung ML-1610 |
| Samsung | Samsung ML-5080 |
| Samsung | Samsung ML-4551ND |
| Samsung | Samsung ML-1650 |
| Samsung | Samsung ML-2152WPS |
| Samsung | Samsung ML-6060N |
| Samsung | Samsung ML-6060S |
| Samsung | Samsung CLP-550 |
| Samsung | Samsung ML-7300 |
| Samsung | Samsung ML-6000 |
| Samsung | Samsung QL-6050 |
| Samsung | Samsung ML-2150 |
| Samsung | Samsung ML-6040 |
| Samsung | Samsung CLP-660ND |
| Samsung | Samsung SI-630A |
| Samsung | Samsung ML-6060 |
| Samsung | Samsung ML-200 |
| Samsung | Samsung ML-7000 |
| Samsung | Samsung ML-210 |



| | |
|---------|----------------------|
| Samsung | Samsung ML-85 |
| Samsung | Samsung ML-7050 |
| Samsung | Samsung ML-4551N |
| Samsung | Samsung ML-1000 |
| Samsung | Samsung ML-1010 |
| Savin | Savin 8090 |
| Savin | Savin CLP350D |
| Savin | Savin MLP145 |
| Savin | Savin C7570 |
| Savin | Savin C2820 |
| Savin | Savin C2824 |
| Savin | Savin C2828 |
| Savin | Savin 2522 |
| Savin | Savin 2527 |
| Savin | Savin 2532 |
| Savin | Savin MLP31nL |
| Savin | Savin FAX3799/3799nf |
| Savin | Savin 2560 |
| Savin | Savin 9016 |
| Savin | Savin 2575 |
| Savin | Savin 9025 |
| Savin | Savin 9033 |
| Savin | Savin 9040 |
| Savin | Savin 9050 |
| Savin | Savin 9060 |
| Savin | Savin 9070 |
| Savin | Savin MLP25 |
| Savin | Savin MLP26 |
| Savin | Savin MLP28 |
| Savin | Savin 5100WD |
| Savin | Savin SLP26n |
| Savin | Savin 9080 |
| Savin | Savin MLP32 |
| Savin | Savin C3333 |
| Savin | Savin 9090 |
| Savin | Savin MLP45 |
| Savin | Savin CLP128 |
| Savin | Savin C3828 |
| Savin | Savin CLP135 |
| Savin | Savin 3515 |
| Savin | Savin 9033b |
| Savin | Savin 40105 |
| Savin | Savin C2524 |



| | |
|-------|--------------------|
| Savin | Savin C2525 |
| Savin | Savin C2532 |
| Savin | Savin MLP31n |
| Savin | Savin 8030e |
| Savin | Savin CLP27DN |
| Savin | Savin CLP240D |
| Savin | Savin MLP35n |
| Savin | Savin C9020 |
| Savin | Savin C9025 |
| Savin | Savin MLP150DN |
| Savin | Savin MLP36n |
| Savin | Savin 8035e |
| Savin | Savin MLP37N |
| Savin | Savin 4018d |
| Savin | Savin C9065 |
| Savin | Savin Pro 1106EX |
| Savin | Savin C9075 |
| Savin | Savin 4015 |
| Savin | Savin 4018 |
| Savin | Savin 9228 |
| Savin | Savin 4045/4145g |
| Savin | Savin 4022 |
| Savin | Savin CLP1620 |
| Savin | Savin 4027 |
| Savin | Savin 9233 |
| Savin | Savin 9240 |
| Savin | Savin C3030 |
| Savin | Savin 9250 |
| Savin | Savin CLP131DN |
| Savin | Savin 4051 |
| Savin | Savin SDC555 |
| Savin | Savin 4060 |
| Savin | Savin 4075 |
| Savin | Savin C3528 |
| Savin | Savin 4045e/4145eG |
| Savin | Savin C3535 |
| Savin | Savin 4090 |
| Savin | Savin 4035/4135g |
| Savin | Savin 9050b |
| Savin | Savin CLP37DN |
| Savin | Savin CLP340D |
| Savin | Savin 917 |
| Savin | Savin CLP831 |

| | |
|-------|------------------|
| Savin | Savin SP C400DN |
| Savin | Savin C4040 |
| Savin | Savin CLP42DN |
| Savin | Savin Pro 907EX |
| Savin | Savin C4535 |
| Savin | Savin C3210 |
| Savin | Savin C4540 |
| Savin | Savin 8110 |
| Savin | Savin C3224 |
| Savin | Savin 8135 |
| Savin | Savin 9021d |
| Savin | Savin Pro 1357EX |
| Savin | Savin 8045/8045g |
| Savin | Savin C2408 |
| Savin | Savin C2410 |
| Savin | Savin 9025b |
| Savin | Savin 8020d |
| Savin | Savin 2535/2235 |
| Savin | Savin CLP26DN |
| Savin | Savin CLP17 |
| Savin | Savin CLP18 |
| Savin | Savin 2545/2245 |
| Savin | Savin MLP235n |
| Savin | Savin CLP22 |
| Savin | Savin CLP28 |
| Savin | Savin MLP25n |
| Savin | Savin 8035/8035g |
| Savin | Savin CLP35 |
| Savin | Savin MLP26n |
| Savin | Savin 8025e |
| Savin | Savin C5050 |
| Savin | Savin MLP28n |
| Savin | Savin 2404WD |
| Savin | Savin CLP1036 |
| Savin | Savin MLP75n |
| Savin | Savin 2404WDP |
| Savin | Savin SGC 1506 |
| Savin | Savin CLP31DN |
| Savin | Savin SLP38c |
| Savin | Savin 9040b |
| Savin | Savin C3210e |
| Savin | Savin 7025 |
| Savin | Savin C6045 |

| | |
|-------|--------------------|
| Savin | Savin 4035e/4135eG |
| Savin | Savin C6055 |
| Savin | Savin 816 |
| Savin | Savin SLP26 |
| Savin | Savin SLP32 |
| Savin | Savin 8045e |
| Savin | Savin 2406WD |
| Savin | Savin Pro 1107EX |
| Savin | Savin Pro 906EX |
| Savin | Savin MLP175n |
| Savin | Savin 7140WD |
| Savin | Savin 8016 |
| Savin | Savin 8020 |
| Savin | Savin 8025 |
| Savin | Savin 8030 |
| Savin | Savin 8055 |
| Savin | Savin Pro 1356EX |
| Savin | Savin 8060 |
| Savin | Savin 8065 |
| Savin | Savin 8070 |
| Savin | Savin 8075 |
| Savin | Savin 8080 |
| Seiko | Seiko SpeedJET 200 |
| Sharp | Sharp AR-BC260 |
| Sharp | Sharp ARP350 |
| Sharp | Sharp AR-M205 PS |
| Sharp | Sharp AR-M236 PS |
| Sharp | Sharp AJ-2000 |
| Sharp | Sharp AJ-2005 |
| Sharp | Sharp AR-M550N PS |
| Sharp | Sharp MX-3500N PS |
| Sharp | Sharp MX-2300FG |
| Sharp | Sharp AR-C261FP |
| Sharp | Sharp AR-451N |
| Sharp | Sharp AR-451S |
| Sharp | Sharp AR-M550N |
| Sharp | Sharp AR-M550U |
| Sharp | Sharp AR-451FP |
| Sharp | Sharp AR-M451U PS |
| Sharp | Sharp AR-M351U PS |
| Sharp | Sharp AR-C262S PS |
| Sharp | Sharp AR-M205 |
| Sharp | Sharp AR-M206 |

| | |
|-------|--------------------|
| Sharp | Sharp AR-M207 |
| Sharp | Sharp MX-4500FN |
| Sharp | Sharp AR-M700N PS |
| Sharp | Sharp MX-4500N |
| Sharp | Sharp AR-M550U PS |
| Sharp | Sharp AR-163G PS |
| Sharp | Sharp AR-351FP |
| Sharp | Sharp MX-4501N |
| Sharp | Sharp AR-M236 |
| Sharp | Sharp AR-M237 |
| Sharp | Sharp AR-C261F PS |
| Sharp | Sharp AR-266FP PS |
| Sharp | Sharp MX-3501FN |
| Sharp | Sharp AR-C261S PS |
| Sharp | Sharp AR-M165 PS |
| Sharp | Sharp AR-M257 |
| Sharp | Sharp AR-C170M |
| Sharp | Sharp AR-C262M PS |
| Sharp | Sharp AR-M276 |
| Sharp | Sharp AR-M277 |
| Sharp | Sharp AR-311S PS |
| Sharp | Sharp MX-3500N |
| Sharp | Sharp MX-3501N |
| Sharp | Sharp AR-C172M |
| Sharp | Sharp AR-205FG PS |
| Sharp | Sharp AR-C260F PS |
| Sharp | Sharp AR-M206 PS |
| Sharp | Sharp AR-M237 PS |
| Sharp | Sharp AR-M155 PS |
| Sharp | Sharp AR-160M |
| Sharp | Sharp AR-C260S PS |
| Sharp | Sharp AR-M700U PS |
| Sharp | Sharp AR-C261FP PS |
| Sharp | Sharp AR-160M PS |
| Sharp | Sharp AR-C261M PS |
| Sharp | Sharp AR-163G |
| Sharp | Sharp MX-2300FG PS |
| Sharp | Sharp AR-555M |
| Sharp | Sharp AR-555S |
| Sharp | Sharp MX-3501FN PS |
| Sharp | Sharp AR-168D |
| Sharp | Sharp AR-168S |
| Sharp | Sharp AR-C260M PS |

| | |
|-------|--------------------|
| Sharp | Sharp AR-5220 PS |
| Sharp | Sharp AR-555S PS |
| Sharp | Sharp AR-M620N PS |
| Sharp | Sharp AR-C170FP PS |
| Sharp | Sharp MX-4501N PS |
| Sharp | Sharp AR-M700N |
| Sharp | Sharp AR-M700U |
| Sharp | Sharp AR-M207 PS |
| Sharp | Sharp AR-555M PS |
| Sharp | Sharp AR-705S PS |
| Sharp | Sharp MX-4500N PS |
| Sharp | Sharp AR-M160 PS |
| Sharp | Sharp AR-M620U PS |
| Sharp | Sharp AR-266FP |
| Sharp | Sharp AR-311N PS |
| Sharp | Sharp AR-M620N |
| Sharp | Sharp AR-M620U |
| Sharp | Sharp AR-5220 |
| Sharp | Sharp AR-161 |
| Sharp | Sharp MX-4500FN PS |
| Sharp | Sharp AR-266S |
| Sharp | Sharp AR-168D PS |
| Sharp | Sharp AR-M150 PS |
| Sharp | Sharp AR-705M PS |
| Sharp | Sharp AR-C260FP |
| Sharp | Sharp AR-C172FP PS |
| Sharp | Sharp AR-311N |
| Sharp | Sharp AR-311S |
| Sharp | Sharp AR-451S PS |
| Sharp | Sharp AR-351S PS |
| Sharp | Sharp AR-311FP |
| Sharp | Sharp AR-BC320 PS |
| Sharp | Sharp AR-M161 PS |
| Sharp | Sharp AR-705M |
| Sharp | Sharp AR-705S |
| Sharp | Sharp AR-205G PS |
| Sharp | Sharp MX-2700FG PS |
| Sharp | Sharp MX-2700G |
| Sharp | Sharp MX-3500FN |
| Sharp | Sharp MX-2700N |
| Sharp | Sharp AR-625S PS |
| Sharp | Sharp AR-M150 |
| Sharp | Sharp AR-M155 |

| | |
|-------|--------------------|
| Sharp | Sharp AR-351FP PS |
| Sharp | Sharp AR-M160 |
| Sharp | Sharp AR-M161 |
| Sharp | Sharp AR-M162 |
| Sharp | Sharp AR-M165 |
| Sharp | Sharp AR-311FP PS |
| Sharp | Sharp AR-625M |
| Sharp | Sharp AR-625S |
| Sharp | Sharp AR-BC320 |
| Sharp | Sharp AR-163FG |
| Sharp | Sharp AR-C260 |
| Sharp | Sharp AR-625M PS |
| Sharp | Sharp AR-C260FP PS |
| Sharp | Sharp MX-2700G PS |
| Sharp | Sharp ARP450 |
| Sharp | Sharp MX-2300G PS |
| Sharp | Sharp AR-C170FP |
| Sharp | Sharp AR-C262FP |
| Sharp | Sharp AR-155FG |
| Sharp | Sharp AR-163FG PS |
| Sharp | Sharp AR-M162 PS |
| Sharp | Sharp MX-3500FN PS |
| Sharp | Sharp AR-200M |
| Sharp | Sharp AR-C260F |
| Sharp | Sharp AR-C260M |
| Sharp | Sharp AR-C260P |
| Sharp | Sharp AR-C260S |
| Sharp | Sharp AR-200M PS |
| Sharp | Sharp MX-2700N PS |
| Sharp | Sharp AR-451N PS |
| Sharp | Sharp AR-C261F |
| Sharp | Sharp MX-4501FN |
| Sharp | Sharp AR-C261M |
| Sharp | Sharp AR-C261S |
| Sharp | Sharp AR-351N PS |
| Sharp | Sharp AR-C260P PS |
| Sharp | Sharp AR-C262M |
| Sharp | Sharp AR-C262S |
| Sharp | Sharp MX-2300N PS |
| Sharp | Sharp AR-BC260 PS |
| Sharp | Sharp AR-168S PS |
| Sharp | Sharp AR-205G |
| Sharp | Sharp AR-C172M PS |

| | |
|--------|-------------------------|
| Sharp | Sharp AJ-1800 |
| Sharp | Sharp AJ-1805 |
| Sharp | Sharp AR-M351N |
| Sharp | Sharp AR-M351U |
| Sharp | Sharp AR-C262FP PS |
| Sharp | Sharp AR-M455N PS |
| Sharp | Sharp AR-M355N |
| Sharp | Sharp AR-M355U |
| Sharp | Sharp AR-M355N PS |
| Sharp | Sharp AR-M276 PS |
| Sharp | Sharp AR-266S PS |
| Sharp | Sharp AR-155FG PS |
| Sharp | Sharp AR-205FG |
| Sharp | Sharp MX-2700FG |
| Sharp | Sharp AR-C170M PS |
| Sharp | Sharp AR-C172FP |
| Sharp | Sharp AR-451FP PS |
| Sharp | Sharp AR-M455U PS |
| Sharp | Sharp AR-M355U PS |
| Sharp | Sharp AR-351N |
| Sharp | Sharp MX-2300G |
| Sharp | Sharp AR-351S |
| Sharp | Sharp MX-2300N |
| Sharp | Sharp AR-M451N |
| Sharp | Sharp AR-M451U |
| Sharp | Sharp AR-M455N |
| Sharp | Sharp AR-M455U |
| Sharp | Sharp MX-4501FN PS |
| Sharp | Sharp AR-M277 PS |
| Sharp | Sharp MX-3501N PS |
| Sharp | Sharp AR-M451N PS |
| Sharp | Sharp AR-C260 PS |
| Sharp | Sharp AR-M351N PS |
| Shinko | Shinko CHC-S9045 |
| SiPix | SiPix Pocket Printer A6 |
| Sony | Sony UP-DP10 |
| Sony | Sony UP-DR100 |
| Sony | Sony UP-DR150 |
| Sony | Sony DPP-EX5 |
| Sony | Sony DPP-EX7 |
| Sony | Sony IJP-V100 |
| Star | Star LC24-100 |
| Star | Star JJ-100 |



| | |
|-------------------|--|
| Star | Star LC 90 |
| Star | Star StarJet 48 |
| Star | Star NL-10 |
| Star | Star LS-04 |
| Star | Star LaserPrinter 8 |
| Star | Star NX-1001 |
| Star | Star LC24-200 |
| Tally | Tally ML450 |
| Tally | Tally MT908 |
| Tally | Tally LN45 |
| Tektronix | Tektronix Phaser 780 |
| Tektronix | Tektronix 4693d |
| Tektronix | Tektronix Phaser 740 Extended |
| Tektronix | Tektronix Phaser 780 Plus |
| Tektronix | Tektronix Phaser 750N |
| Tektronix | Tektronix Phaser 750P |
| Tektronix | Tektronix Phaser 740 Plus |
| Tektronix | Tektronix Phaser PX |
| Tektronix | Tektronix Phaser 850N |
| Tektronix | Tektronix 4695 |
| Tektronix | Tektronix 4696 |
| Tektronix | Tektronix 4697 |
| Tektronix | Tektronix Phaser IISX |
| Tektronix | Tektronix Phaser 840 Plus |
| Tektronix | Tektronix Phaser 560 Extended |
| Tektronix | Tektronix Phaser 350 |
| Tektronix | Tektronix Phaser 780 Graphics |
| Tektronix | Tektronix Phaser 840 |
| Tektronix | Tektronix Phaser 850 |
| Tektronix | Tektronix Phaser 560 Extended - Envelope |
| Tektronix | Tektronix Phaser 550 |
| Tektronix | Tektronix Phaser 560 |
| Tektronix | Tektronix Phaser 850DP |
| Tektronix | Tektronix Phaser 850DX |
| Tektronix | Tektronix Phaser 560 - Envelope |
| Tektronix | Tektronix Phaser 750DP |
| Tektronix | Tektronix Phaser 750DX |
| Tektronix | Tektronix Phaser 740 |
| Tektronix | Tektronix Phaser 840 Extended |
| Texas Instruments | Texas Instruments microLaser PowerPro 12 |
| Texas Instruments | Texas Instruments microLaser XL Basic |
| Texas Instruments | Texas Instruments microLaser XL PS17 |
| Texas Instruments | Texas Instruments microLaser XL PS35 |



| | |
|-------------------|---------------------------------------|
| Texas Instruments | Texas Instruments microLaser Pro 600 |
| Texas Instruments | Texas Instruments microLaser Pro 8 |
| Texas Instruments | Texas Instruments microLaser Pro E |
| Texas Instruments | Texas Instruments microLaser XL Turbo |
| Toshiba | Toshiba e-Studio 3511 |
| Toshiba | Toshiba e-Studio 351c |
| TOSHIBA | TOSHIBA e-ST450/452Series PS |
| Toshiba | Toshiba e-Studio 3510c |
| Toshiba | Toshiba e-Studio 205 |
| TOSHIBA | TOSHIBA e-STUDIO2330C |
| Toshiba | Toshiba e-Studio 230 |
| Toshiba | Toshiba e-Studio 232 |
| Toshiba | Toshiba e-Studio 233 |
| Toshiba | Toshiba e-Studio 237 |
| Toshiba | Toshiba e-Studio 720 |
| Toshiba | Toshiba e-Studio 723 |
| Toshiba | Toshiba e-Studio 280 |
| Toshiba | Toshiba e-Studio 282 |
| Toshiba | Toshiba e-Studio 283 |
| Toshiba | Toshiba e-Studio 450s |
| Toshiba | Toshiba e-Studio 4511 |
| Toshiba | Toshiba e-Studio 451c |
| TOSHIBA | TOSHIBA e-ST280/282Series PS |
| TOSHIBA | TOSHIBA e-STUDIO355 |
| Toshiba | Toshiba e-Studio 1101 |
| TOSHIBA | TOSHIBA e-STUDIO205Series PS |
| Toshiba | Toshiba e-Studio 3530c |
| Toshiba | Toshiba e-Studio 500p |
| Toshiba | Toshiba e-Studio 500s |
| Toshiba | Toshiba e-Studio 901 |
| Toshiba | Toshiba e-Studio 162d |
| Toshiba | Toshiba e-Studio 450 |
| Toshiba | Toshiba e-Studio 452 |
| Toshiba | Toshiba e-Studio 453 |
| Toshiba | Toshiba e-Studio 5500c |
| TOSHIBA | TOSHIBA e-ST4511/451cSeries PS |
| Toshiba | Toshiba DP2570 |
| Toshiba | Toshiba e-Studio 4500c |
| Toshiba | Toshiba e-Studio 3500c |
| Toshiba | Toshiba e-Studio 603t |
| Toshiba | Toshiba e-Studio 220cp |
| Toshiba | Toshiba e-Studio 2500c |
| Toshiba | Toshiba e-Studio 600 |

| | |
|----------------------|-----------------------------------|
| Toshiba | Toshiba e-Studio 603 |
| Toshiba | Toshiba e-Studio 162 |
| Toshiba | Toshiba e-Studio 165 |
| Toshiba | Toshiba e-Studio 167 |
| Toshiba | Toshiba e-Studio 1351 |
| Toshiba | Toshiba e-Studio 523t |
| TOSHIBA | TOSHIBA e-STUDIO3510cSeries PS |
| Toshiba | Toshiba e-Studio 4520c |
| Toshiba | Toshiba e-Studio 281c |
| Toshiba | Toshiba e-Studio 350 |
| Toshiba | Toshiba e-Studio 352 |
| Toshiba | Toshiba e-Studio 353 |
| Toshiba | Toshiba e-Studio 850 |
| Toshiba | Toshiba e-Studio 853 |
| TOSHIBA | TOSHIBA e-STUDIO850Series PS |
| Toshiba | Toshiba e-Studio 2830c |
| Toshiba | Toshiba e-Studio 200L |
| Toshiba | Toshiba e-Studio 202L |
| Toshiba | Toshiba e-Studio 723t |
| Toshiba | Toshiba e-Studio 203l |
| Toshiba | Toshiba e-Studio 520 |
| Toshiba | Toshiba e-Studio 523 |
| TOSHIBA TEC Corp. | Toshiba GL-1010 |
| TOSHIBA TEC Corp. | Toshiba GL-1020 |
| Xante | Xante Accel-a-Writer 4G |
| Xante | Xante FilmMaker 4 |
| Xante | Xante PlateMaker 4 |
| Xerox | Xerox Phaser 8500DN |
| Xerox | Xerox Phaser 2135 PS |
| Xerox | Xerox Phaser 8400BD |
| Xerox | Xerox WorkCentre 133 v3015.103 PS |
| Xerox | Tektronix Phaser 860N by Xerox |
| Xerox | Xerox Phaser 7750B |
| Xerox | Xerox WorkCentre 7228 |
| Xerox | Xerox WorkCentre 7232 |
| Xerox | Xerox Phaser 7400DXF |
| Xerox | Xerox Phaser 8400DP |
| Xerox | Xerox Phaser 8400DX |
| Xerox | Xerox WorkCentre 7242 |
| Xerox | Xerox DocuPrint N4025 PS |
| Xerox | Xerox DocuPrint N17 |
| Xerox | Xerox DocuPrint N24 |

| | |
|-------|---------------------------------------|
| Xerox | Xerox DocuPrint N32 |
| Xerox | Xerox DocuPrint N4525 PS3 |
| Xerox | Xerox DocuPrint N40 |
| Xerox | Xerox Phaser 7750DN |
| Xerox | Xerox DocuPrint P1202 |
| Xerox | Xerox Phaser 3500 |
| Xerox | Xerox Phaser 7400 |
| Xerox | Xerox Phaser 7750GX |
| Xerox | Xerox Phaser 5400 PS |
| Xerox | Xerox WorkCentre M123 v3015.103 PS |
| Xerox | Xerox Phaser 6100 |
| Xerox | Xerox WorkCentre Pro 123 v3015.103 PS |
| Xerox | Xerox Phaser 6120 |
| Xerox | Xerox WorkCentre Pro 128 |
| Xerox | Xerox Phaser 8200DP |
| Xerox | Xerox Phaser 6130 |
| Xerox | Xerox Phaser 8200DX |
| Xerox | Xerox WorkCentre Pro 133 |
| Xerox | Xerox WorkCentre 450cp |
| Xerox | Xerox WorkCentre M118 v3015.103 PS |
| Xerox | Xerox Phaser 8200B |
| Xerox | Xerox Phaser 8200N |
| Xerox | Xerox WorkCentre XK35c |
| Xerox | Tektronix Phaser 860B by Xerox |
| Xerox | Xerox Phaser 6180 |
| Xerox | Xerox Document Homecentre |
| Xerox | Xerox FaxCentre 2218 |
| Xerox | Xerox Phaser 3200MFP |
| Xerox | Xerox FaxCenter 2121 |
| Xerox | Xerox Phaser 7760DN |
| Xerox | Xerox Phaser 7760DX |
| Xerox | Xerox Phaser 5500DN |
| Xerox | Xerox Phaser 5500DT |
| Xerox | Xerox Phaser 5500DX |
| Xerox | Xerox DocuPrint C6 |
| Xerox | Xerox DocuPrint C8 |
| Xerox | Xerox Phaser 4510 |
| Xerox | Xerox Phaser 6180MFP-D |
| Xerox | Xerox Phaser 7760GX |
| Xerox | Xerox Phaser 6200B |
| Xerox | Xerox DocuPrint P12 |
| Xerox | Xerox Phaser 6200N |
| Xerox | Xerox Phaser 6180DN |

| | |
|-------|---------------------------------|
| Xerox | Xerox 3700 XES |
| Xerox | Xerox DocuPrint N4512PS |
| Xerox | Xerox Phaser 6250B |
| Xerox | Xerox Phaser 6250N |
| Xerox | Xerox Phaser 7700DN |
| Xerox | Xerox Phaser 7700DX |
| Xerox | Xerox DocuPrint P8e |
| Xerox | Xerox Phaser 7700GX |
| Xerox | Tektronix Phaser 860DP by Xerox |
| Xerox | Xerox DocuPrint C11 |
| Xerox | Xerox WorkCentre M20 |
| Xerox | Xerox WorkCentre M24 |
| Xerox | Xerox Phaser 7300B |
| Xerox | Xerox Phaser 7300N |
| Xerox | Xerox DocuPrint C20 |
| Xerox | Xerox Phaser 6360 |
| Xerox | Xerox Phaser 5500 |
| Xerox | Xerox WorkCentre PE120 |
| Xerox | Xerox DocuPrint C55 |
| Xerox | Xerox DocuPrint 4508 |
| Xerox | Xerox Phaser 6300N |
| Xerox | Xerox Phaser 4510B |
| Xerox | Xerox Phaser 4510N |
| Xerox | Xerox DocuPrint N4025 |
| Xerox | Xerox Phaser 7400DN |
| Xerox | Xerox Phaser 7400DT |
| Xerox | Xerox Phaser 7400DX |
| Xerox | Xerox DocuColor 2006 |
| Xerox | Xerox WorkCentre 470cx |
| Xerox | Xerox Document Centre 400 |
| Xerox | Xerox Phaser 8400B |
| Xerox | Xerox Phaser 860B |
| Xerox | Xerox Phaser 8400N |
| Xerox | Xerox Phaser 860N |
| Xerox | Xerox DocuPrint N4512 |
| Xerox | Xerox Phaser 3400 |
| Xerox | Xerox DocuPrint N4525 |
| Xerox | Xerox DocuPrint NC60 PS3 |
| Xerox | Xerox Phaser 7300DN |
| Xerox | Xerox Phaser 7300DT |
| Xerox | Xerox Phaser 7300DX |
| Xerox | Xerox DocuPrint N3225 |
| Xerox | Xerox Phaser 7400N |



| | |
|-------|---------------------------------------|
| Xerox | Xerox Phaser 3450 |
| Xerox | Xerox Phaser 2135 |
| Xerox | Xerox Phaser 7750DXF |
| Xerox | Xerox DocuPrint M750 |
| Xerox | Xerox DocuPrint M760 |
| Xerox | Tektronix Phaser 860DX by Xerox |
| Xerox | Xerox Phaser 1235 PS |
| Xerox | Xerox Phaser 8500N |
| Xerox | Xerox WorkCentre 7328 |
| Xerox | Xerox DocuPrint N2125 PS |
| Xerox | Xerox WorkCentre 7335 |
| Xerox | Xerox WorkCentre 7345 |
| Xerox | Xerox Phaser 4500DT |
| Xerox | Xerox Phaser 4500DX |
| Xerox | Xerox Phaser 3110 |
| Xerox | Xerox Phaser 4400B |
| Xerox | Xerox Phaser 4400N |
| Xerox | Xerox Phaser 3124 |
| Xerox | Xerox WorkCentre 24 |
| Xerox | Xerox Phaser 3150 |
| Xerox | Xerox Phaser 6350DP |
| Xerox | Xerox Phaser 6350DT |
| Xerox | Xerox Phaser 6350DX |
| Xerox | Xerox Phaser 4400DT |
| Xerox | Xerox Phaser 4400DX |
| Xerox | Xerox 4045 XES |
| Xerox | Xerox WorkCentre Pro 133 v3015.103 PS |
| Xerox | Xerox Phaser 790 |
| Xerox | Xerox WorkCentre M128 v3015.103 PS |
| Xerox | Xerox Phaser 8860 |
| Xerox | Xerox DocuPrint N2125 |
| Xerox | Xerox Phaser 6250DP |
| Xerox | Xerox Phaser 6250DT |
| Xerox | Xerox Phaser 6250DX |
| Xerox | Xerox WorkCentre Pro 128 v3015.103 PS |
| Xerox | Xerox Phaser 8550DP |
| Xerox | Xerox Phaser 8550DT |
| Xerox | Xerox Phaser 8550DX |
| Xerox | Xerox Phaser 5500B |
| Xerox | Xerox Phaser 5500N |
| Xerox | Xerox DocuPrint XJ6C |
| Xerox | Xerox Phaser 4510DT |
| Xerox | Xerox Phaser 4510DX |

| | |
|-------|------------------------|
| Xerox | Xerox WorkCentre M118 |
| Xerox | Xerox Phaser 4500B |
| Xerox | Xerox DocuPrint XJ8C |
| Xerox | Xerox Phaser 4500N |
| Xerox | Xerox Able 1406 |
| Xerox | Xerox Phaser 6360DN |
| Xerox | Xerox Phaser 6360DX |
| Xerox | Xerox Phaser 8560 |
| Xerox | Xerox Phaser 6300DN |
| Xerox | Xerox Phaser 8560DN |
| Xerox | Xerox WorkCentre C2424 |
| Xerox | Xerox Phaser 6130N |
| Xerox | Xerox WorkCentre 4118 |
| Xerox | Xerox 2700 XES |
| Xerox | Xerox Phaser 860DP |
| Xerox | Xerox Phaser 860DX |
| Xerox | Xerox Phaser 7760 |
| Xerox | Xerox Phaser 6200DP |
| Xerox | Xerox Phaser 1235 |
| Xerox | Xerox Phaser 6200DX |